Just enjoy the game ® with

CLUB*RUNNER*®



Read carefully before you operate or transport your new Clubrunner electric golf caddy. Retain manual for future reference. For warranty information see inside.

DEAR FELLOW GOLFER

Congratulations, on your decision to purchase the Clubrunner Electric Golf Caddy by Paradigm Sports. We are confident that you will experience the benefits that tens of thousands of other owners have. Golf will be even more enjoyable when playing with your own personal caddy. Read and follow the instructions and recommendations contained within this manual and then go out and "Just enjoy the game."

Should you require after-sales support, simply call our toll free number or contact us by e-mail. As North America's largest manufacturer of Golf Caddies for the walking golfer, we are comitted to our customers and the support of our products.

.... Good Golfing

Warranty

Two full years limited warranty on all parts and workmanship. Provided the Clubrunner Caddy is used and maintained only as recommended and is not subject to commercial use, misuse, negligence or wilful damage and no unauthorized service or modifications are made to it, the manufacturer warrants to the original purchaser, that the product is free from defects in the material and workmanship for a period of two full years from the date of purchase.

The Battery charger is warranted by the original equipment manufacturer. Batteries supplied with the Clubrunner Caddy are warranted against defects by the original equipment manufacturer. (See separate warranty declaration supplied with the battery).

The manufacturer will, at its option, either repair or replace any defective parts, free of charge to the purchaser. Freight charges involved in returning goods for repair will be the responsibility of the purchaser.

This warranty does not cover accidental damage and specifically excludes claims for indirect, incidental or consequential damages.


Some states do not allow the exclusion or limitation of incidental or consquential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long the warranty lasts, so the above limitations may not apply to you. This warranty gives specific legal rights and you may also have other rights which vary from state to state.

ASSEMBLY

Battery Assembly

Assemble the Leadwire - Battery to the battery teminals using the nuts and bolts provided. (see figure).

Position the red terminal cover over the positive terminal post as shown.

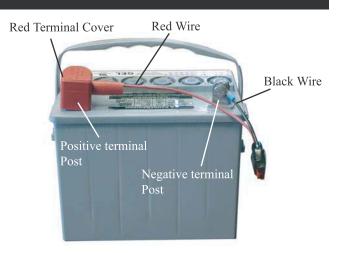


Bag Rest Assembly


Remove screw, nut and two metal grommets from the owner's manual packet.

Chose either the upper mounting location holes or the lower position, based on your preference and / or the height of your golf bag. Place the metal grommets in the tube depressions on each side of the handle.

Position the bag rest over the holes and grommets, align the holes and assemble the bolt and nut as shown.


Click the bag rest onto the tube and check for suitable position. Secure nut and bolt.

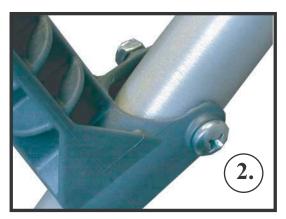

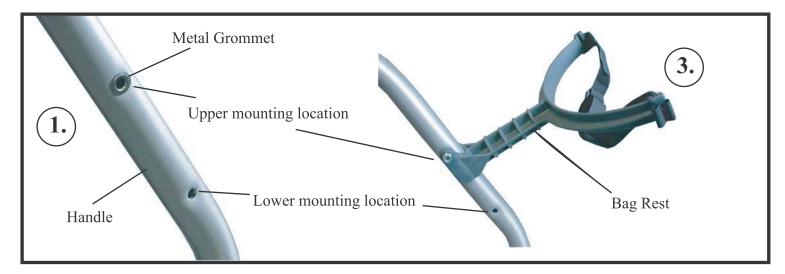

Tension Knob Assembly

Thread the tension knob into the chassis and nut as shown.

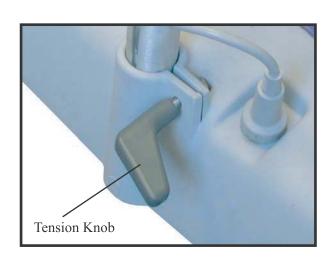

OPERATION

Connect the retractable front wheel to the chassis by lifting up on the release knob, engaging the tube in the chassis, release the release knob and slide the tube into the chassis until it latches securely.

Note:-

For storage, the front wheel assembly can be removed completely, or simply slid in toward the chassis.

Slide the handle tube into the chassis mounting hole and secure by tightening the tension knob.

Note:-

To remove the handle after use, simply loosen the tension knob, lift out the handle and fold the upper bag rest


Place the battery assembly into the battery compartment and connect the battery connector to the chassis connector matching the colours red to red, black to black.


After use, disconnect the battery, remove from the caddy and connect to the battery charger.


Replace the battery cover.

Ensure the power switch on the handle is in the off position, then plug in the control cable jack as shown in picture #2.

Place your golf bag on the bag rest brackets. Secure by fitting the long velcro strap through the "D" ring, pull snugly and flatten velcro into place.

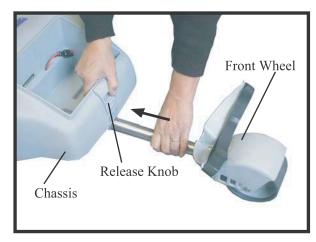

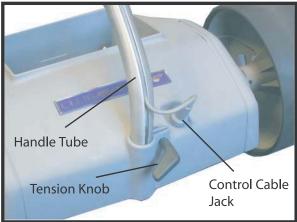

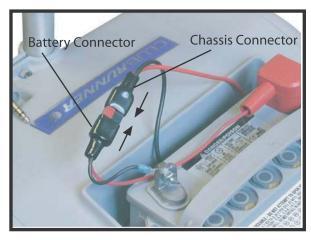



OPERATION (CONTINUED)

Rotate the speed control knob fully counter clockwise. Switch the power switch to "On". Rotate the speed control knob clockwise until the desired walking speed is attained.. The power switch can now be used for on/off control.


A "soft-start" feature is built in to provide smooth acceleration when switching to the "on" position.

Speed control changes can be made while moving to obtain your optimum walking speed.

Note:-

If the caddy is stationary, switch the power switch "off".

Never leave the unit switched on and the speed control knob turned down to zero. As well as draining power, this could cause overheating of circuitry.

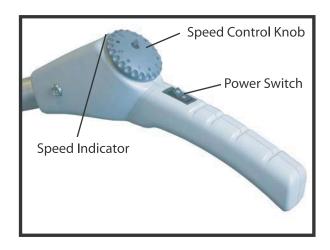

BATTERY MAINTENANCE AND CHARGING

The battery supplied with your Clubrunner product should be charged immediately after every round of golf.

 
Do not use any other type of charger to charge the battery. Serious damage or personal injury could result.


Prior to using, read carefully the additional instructions supplied with the battery charger.

Battery Handling Precautions

- Never place the battery near fire.
- Never short the terminals.
- If battery cracks due to mishandling and dilute sulfuric acid contacts the skin, wash it off immediately with water. If sulfuric acid contacts the eyes, wash them with lots of water and see a doctor.
- Recharge the battery as soon as possible after use.
- When battery is not to be used for a long period, store in a cool place, preferably below 20 deg. C.
 We advise that the battery remain on the charger connected to the AC.
- Dropping or otherwise mishandling the battery may result in irreversible damage to the battery which would result in having to replace the battery.

WARNING: Leaving a battery in a discharged or semi-discharged state is the leading cause of premature battery failure.

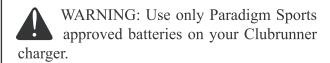

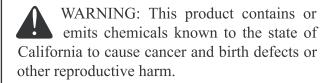

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

SAFETY PRECAUTIONS

This device is not a toy. Care should be taken at all times as there are high torque drives in operation.

All batteries are live power sources which typically contain caustic materials. Serious injury or fire may result if the battery is not handled properly. If a metal object (such as the metal shaft on a golf club) contacts both battery terminals, the battery may short out, possibly starting a fire in your vehicle.

The preferred transportation method is to place the chassis of the electric golf caddy in the trunk of your car, securing it from excessive movement. Place the battery in the battery compartment of the chassis and replace the battery cover over the battery. If this is not possible, then please be sure to follow the four steps below:-

- 1. Install the red terminal cover. (see Battery Assembly section of this manual)
- 2. Cover the battery terminals and wires to prevent shorting or arcing across the terminals. The battery cover is an appropriate choice as a terminal and wire cover. It is further recommended that the cover be secured by a strap or bungee during transportation.
- 3. The battery must be secured in place (in trunk or rear seat floor) to prevent shifting or tipping.
- 4. Make certain that golf bag and golf club shafts are secure and will in no way contact the battery terminals.

The Clubrunner golf caddy "free wheels" in a forward direction. This allows you to push the cart without motor assist. The feature also allows conserving power going downhill when the power switch can be turned off. However it is recommended that, when going downhill, and uphill, you hold onto the handle to prevent the possibility of tipping and/or a runaway.

Do not use the caddy to "pull" you up hill or drag the caddy uphill behind a riding cart.

TROUBLESHOOTING AND MAINTENANCE

1. No Power/Loss of Power


- * Check that the Power Switch on the Control Handle is in the "ON" position (See Operation section).
- * Check that the Jack plug is securely connected with the socket on the chassis. (See Operation section).
- * Check and ensure that the battery connections are all correct and secure. (See Battery Assembly section).
- * Check for solid connection of battery connector and chassis connector. (See Operation section).
- * Check battery for adequate charge and/or recharge.
- * Contact Parts and Service Department. 1-800-508-5408 (USA) 1-800-267-0098 (Canada)

2. To Clean Your Clubrunner Caddy

Disconnect and remove the battery before washing exterior surfaces with mild, soapy water.

Do not power wash.

EXPLODED VIEW - CLUBRUNNER

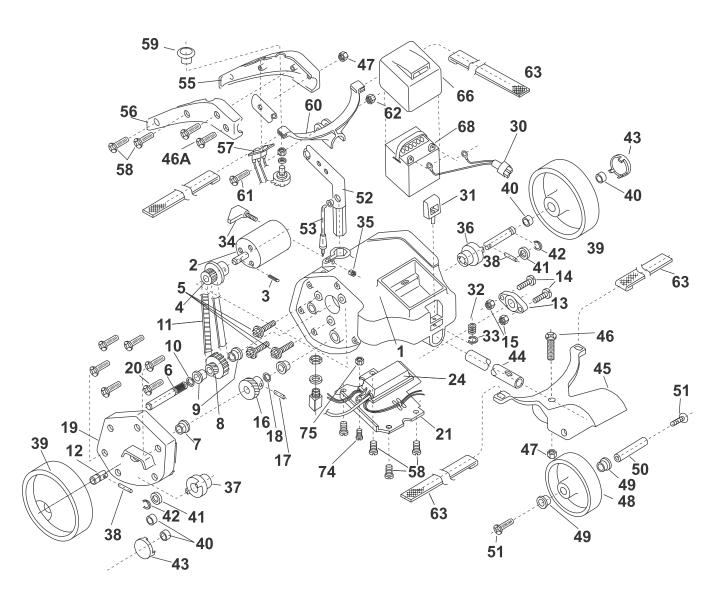

See over for Parts List - Please quote the Part number from this list when ordering



Replacement Parts List - See over for exploded viw Quote the Part Number when ordering

ltem	Part		ltem	Part	
No.	No.	Description	No.	No.	Description
1	K0212	Chassis	37	K7230	Clutch Assembly Bight Hand
1 2	K7000	Gear Drive Motor	3 <i>1</i> 38	K7230 K7290	Clutch Assembly - Right Hand Drive Pin (2 reg'd.)
3	K7000 K2600	Roll Pin	39	K8600	Rear Wheel (2 req'd.)
4	K2300	Pulley	40	K0000	Bearing (4 req'd.)
5	K2111	Screw - #10-32 x 3/4" (3 reg'd.)	41	K1700	Washer (2 req'd.)
6	K0520	Shaft	42	K3010	Retaining Ring (2 req'd)
7	K0000	Rear Axle Bearings (2 req'd.)	43	K0220	Hub - Cap Rear Wheel (2 req'd.)
8	K2230	Pulley Gear	44	K2010	Front Wheel Tube
9	K0040	Bearing (2 req'd.)	45	K6500	Front Wheel Housing
10	K1730	Thrust Washer	46	K2197	Screw #10-24 x 1-3/4"
11	K0800	Drive Belt	46A	K2196	Screw #10-24 x 1-1/2"
12	K0510	Rear Axle	47	K2195	Hex. Nut (2 req'd.)
13	K0030	Mounting Bearing	48	K8630	Front Wheel
14	K2106	Screw 1/4"-20 x 1/2" (2 req'd.)	49	K0020	Nyliner Bearing - Front Wheel (2 req'd.)
15	K3120	Hex. Nut (2 req'd.)	50	K0500	Front Axle
16	K2222	Output Gear	51	K2101	Screw 1/4"-20 x 1/2" (2 req'd.)
17	K0540	Pin - Drive Shaft	52	K2000	Handle Tube
18	K1710	Thrust Washer	53	K0700	Cord Handle
19	K0230	Cover Gearcase	55	K0900	Left Handle
20	K3430	Screw #8-16 x 3/4" (6 req'd.)	56	K0901	Right Handle
21	K1900	Plate, Control Board Mounting	57	K4011	Switch Harness Assembly
22	K1500	Spacer	58	K2194	Screw #8-18 x 5/8" (7 req'd.)
23	K1720	Shoulder Washer (2 reg'd.)	59	K0100	Speed Selector Knob
24	92582	Control Board Assembly	60	K3900	Upper Bag Rest
24A	K4999	Shrink Tube (2 req'd.)	61	K2130	Screw 1/4"-20 x 1-3/4"
25	K2198	Screw #8-32 x 1/2"	62	K3100	Hex. Nut - Bag Rest
26	K3130	Hex. Nut	63	K3801	Velcro Strap Set (2 req'd.)
27	K2199	Screw #8-32 x 3/8" (2 req'd.)	66	K0240	Battery Cover
28	K6300	Tie Wrap	67	K3810	Handle Strap Battery (obsolete)
29	K0601	Leadwire - Control Board	68	K8702	Battery
30	K0604	Leadwire - Battery	70	K8716	Battery Charger - Europe
31	K0110	Release Knob	71	K8719	Battery Charger - U.K.
32	K2720	Release Knob Spring	72	K8721	
33	K3199	E - Ring	73	K8725	
34	K0120	Tension Knob	74	0001	Screw #10-24 x 1/2" (2 req'd.)
35	K3110	Hex. Nut	75	0002	Nyloc Nut #10-24 (2 req'd.)
36	K7220	Clutch Assembly - Left Hand			

Paradigm Sports Inc. 300 Canal Street, Lawrence, MA 01840 USA

Toll Free: 1-800-508-5408 Fax: 1-800-726-5785 e-mail: info@clubrunnergolf.com