

FORECADDY™



USER MANUAL



Thank you.

For choosing the ForeCaddy by Foresight Sports.
Like everything we make, this product is designed
to provide you with years of game-changing
performance on the course.

Should you have any questions or concerns,
please contact our service team.




This product is Health Smart!


Instead of driving a golf cart, your ForeCaddy will
help you to enjoy the incredible health benefits of
walking your favorite course. Health benefits that
include lower blood pressure and cholesterol,
improving cardiovascular and cognitive function,
and reducing stress.



Features & Components

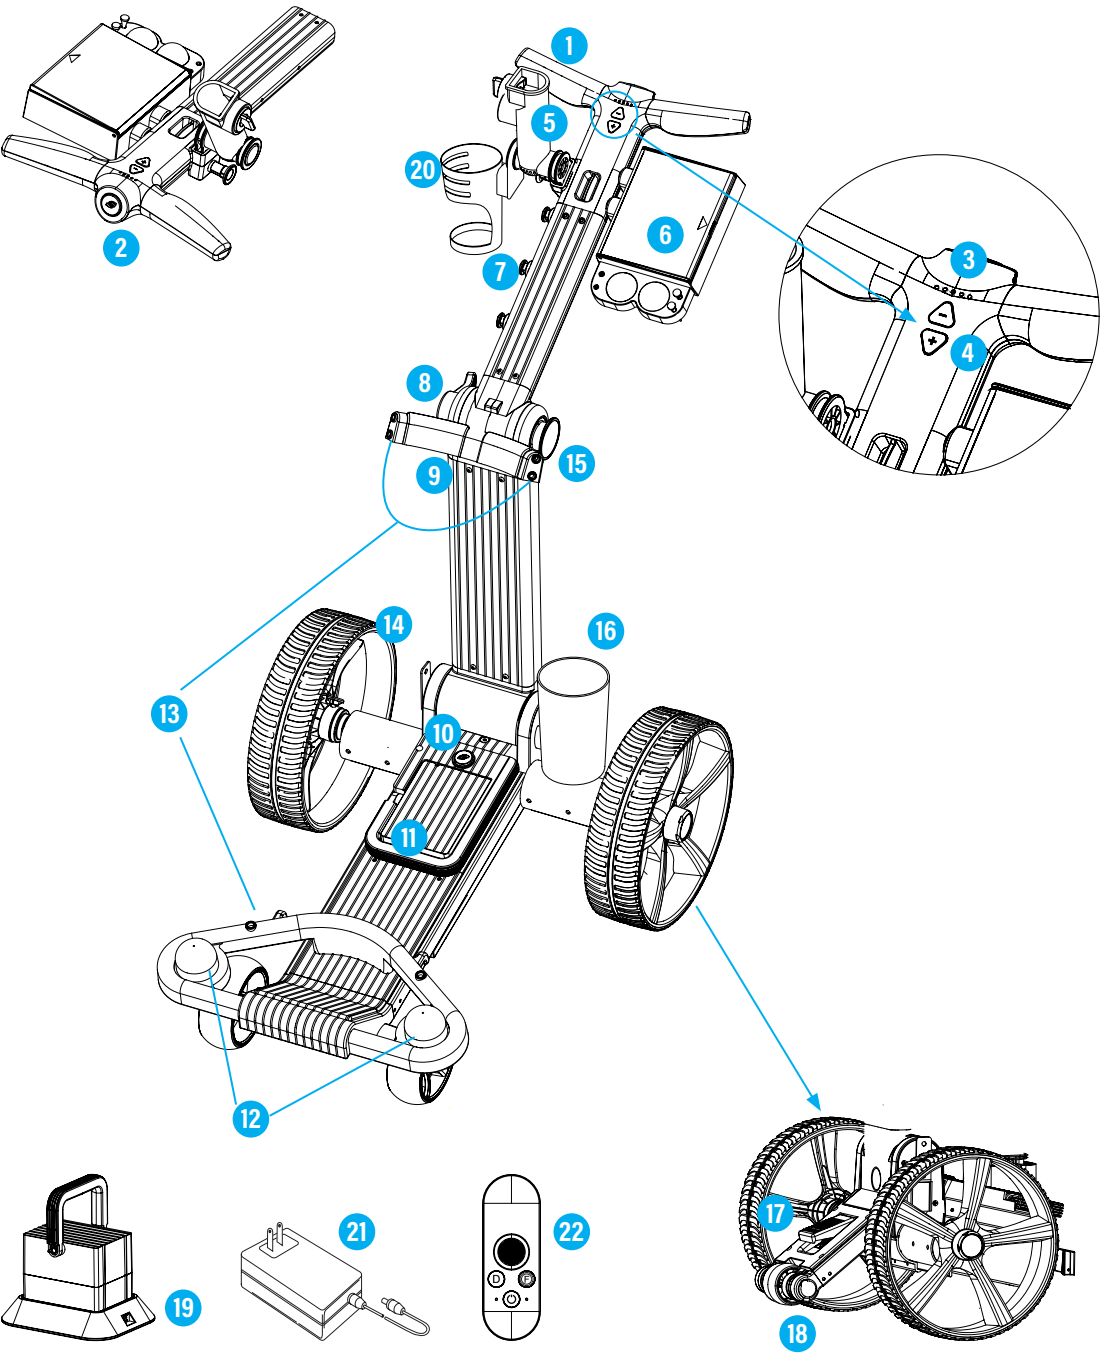

- 1 Handle
- 2 Power Assist/Stop Button
- 3 Cart Power Indicator
- 4 Acceleration & Deceleration Button
- 5 Umbrella Holder
- 6 Score Card and Ball Holder
- 7 Hook
- 8 Arm Adjustment Latch
- 9 Golf Bag (Upper) Holder
- 10 Cart Power Button
- 11 Cart Battery
- 12 Cart LED Indicator Light
- 13 Golf Bag Straps
- 14 Wheels
- 15 Range Finder Magnet
- 16 Sand Bottle Holder
- 17 Column Folding Pedal
- 18 Charging Port
- 19 External Cart Battery Charging Base
- 20 Drink Holder
- 21 Power Charger Adapter
- 22 Remote Control

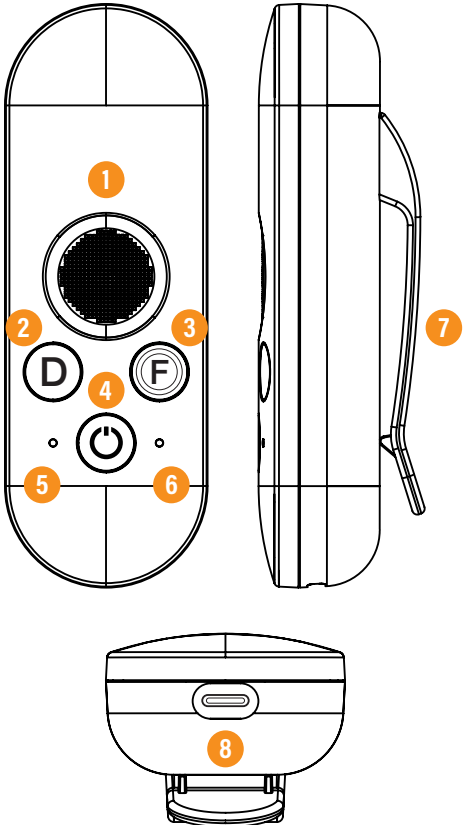


- 1 Control Stick
- 2 Power Assist/Remote Mode
- 3 Follow Mode BETA
- 4 Power On/Off
- 5 Remote Control Battery Indicator
- 6 Golf Cart Battery Indicator
- 7 Belt Clip
- 8 USB TYPE-C Charging Port

Getting Started

Folding and unfolding

The ForeCaddy can be collapsed and unfolded for storage and transportation.

Press and hold down the red lever and pull up on the handle. The lower column will lock in place when fully extended (vertical). Adjust the steering column to the desired angle and lock in place with the arm lock.

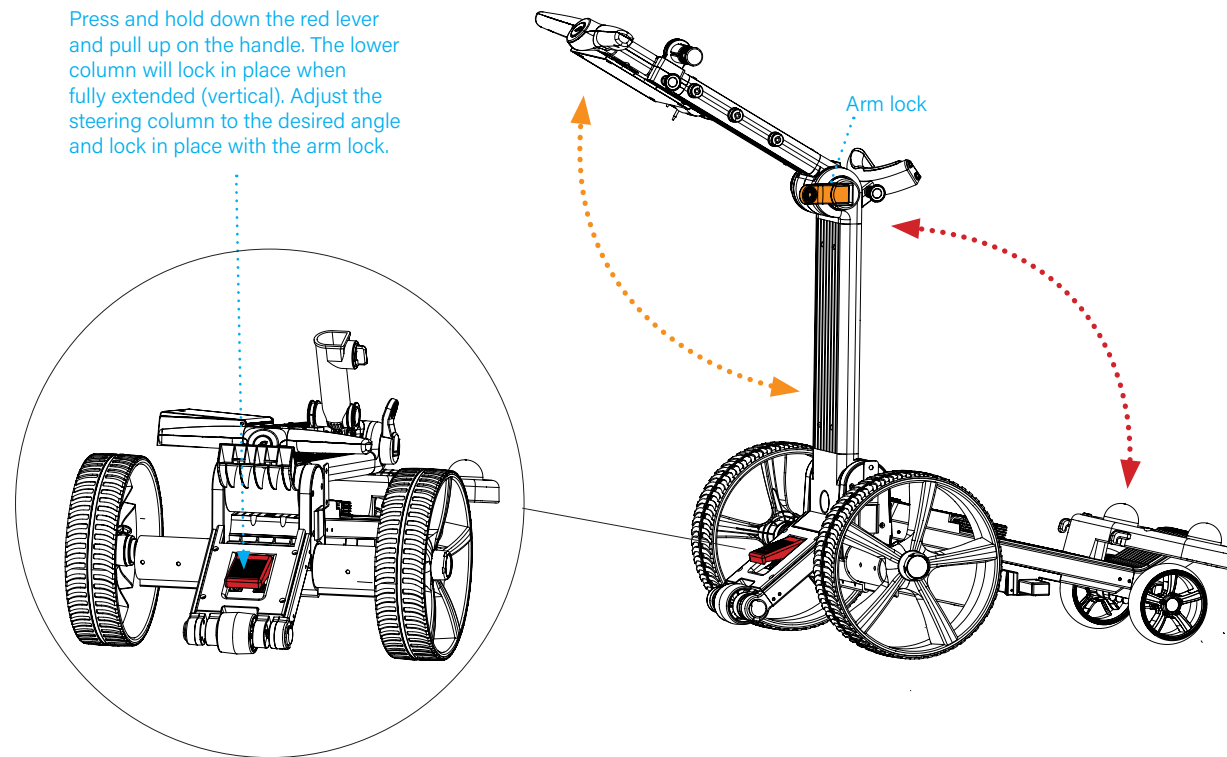

Cleaning and storing


To clean your ForeCaddy, please use water ONLY.

It is recommended that you clean your ForeCaddy after every use by using compressed air or gently rinsing with cold or warm (not hot) water. Towel or air dry thoroughly before storing in a cool, dry place.


Charging the ForeCaddy battery

Connect the power adapter charger cable to the charging port on the back of the ForeCaddy.

You can also charge the battery on the external charger. (page 24)

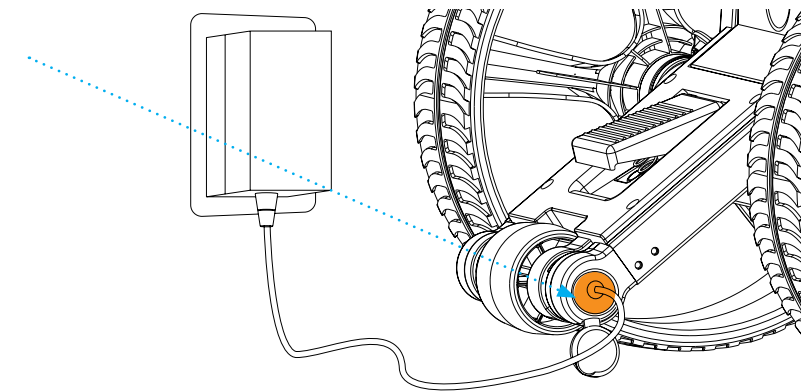


Securing a golf bag (with provided straps)

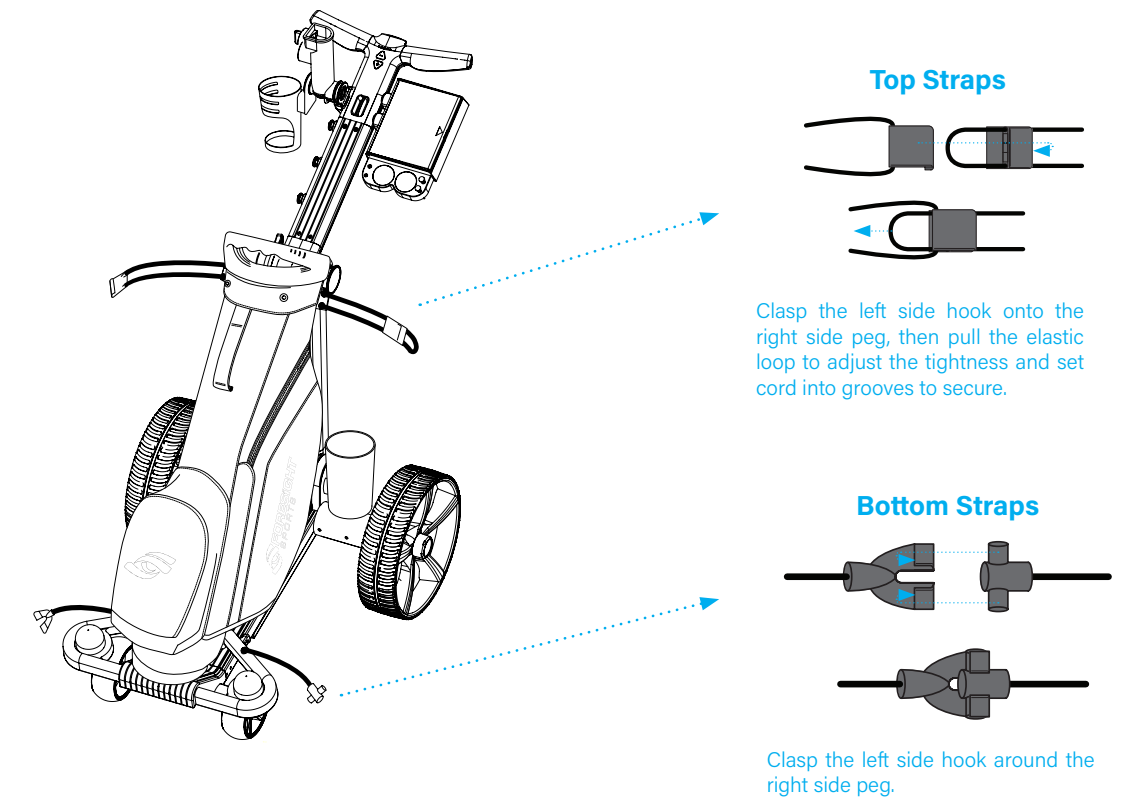


Power Features

Powering the ForeCaddy ON and OFF


Quickly press the power button  to turn the ForeCaddy ON or OFF

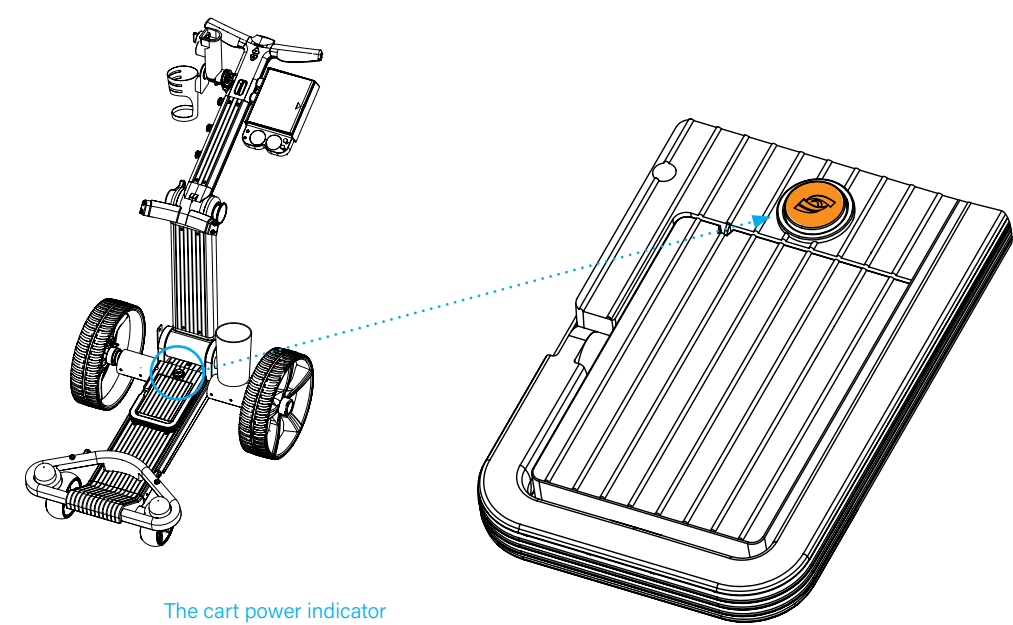



The cart power indicator lights will confirm that the ForeCaddy is ON or OFF, and will indicate the amount of battery charge remaining.

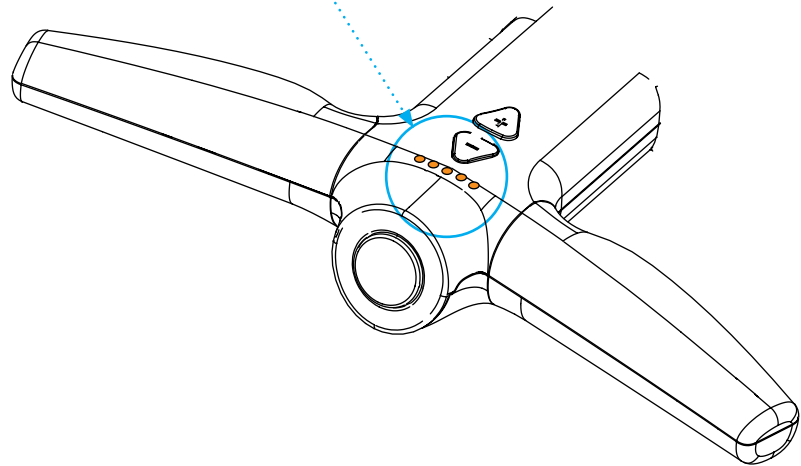


Powering the Remote ON and OFF

Press and hold  to turn the remote control ON or OFF

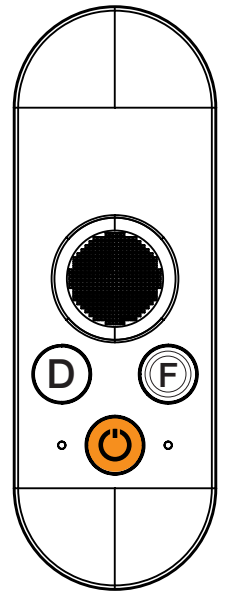


Quickly press  on the ForeCaddy handle or any button on the remote to brake and stop the ForeCaddy while in Remote Control or Follow modes.

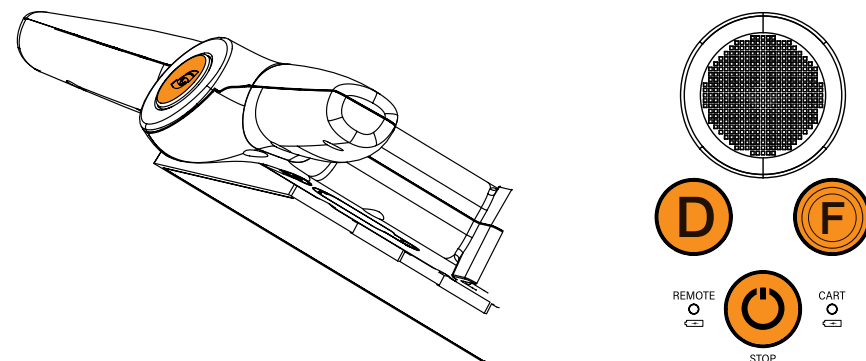


Operating Modes (At-A-Glance)

Your ForeCaddy can be operated in four (4) different modes:


MODE 1: MANUAL (UNASSISTED)

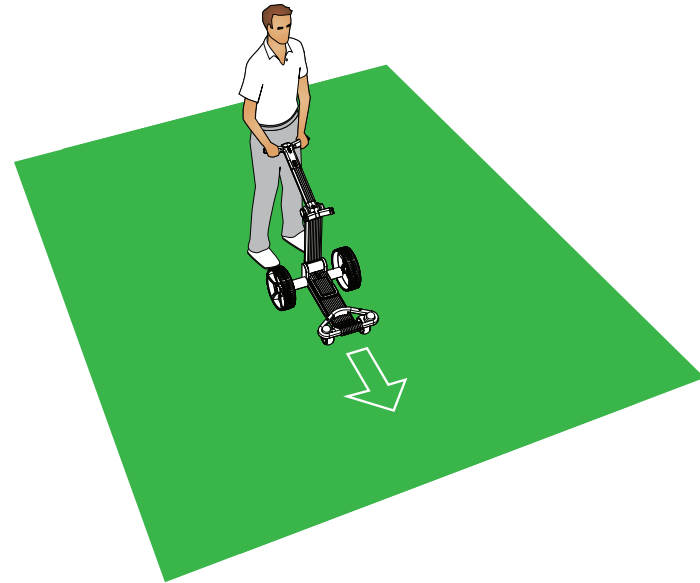

(No Indicator Lights)

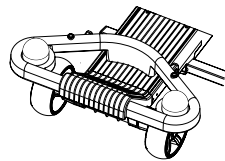


Rear Wheel Setting:

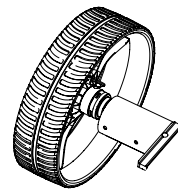


Outer Groove


MODE 2: POWER ASSIST

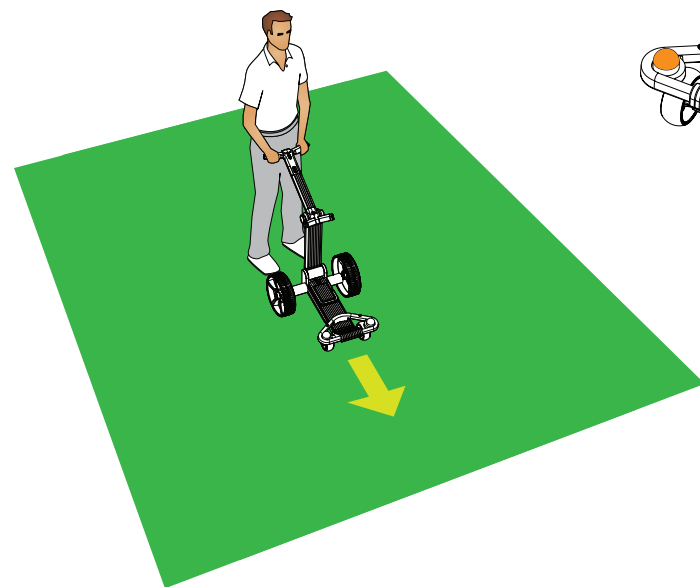

Orange OR Blue Indicator Lights


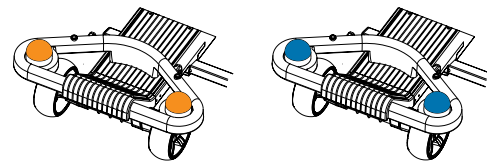


Rear Wheel Setting:

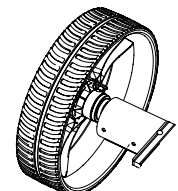


Inner Groove


MODE 3: REMOTE OPERATION

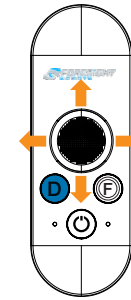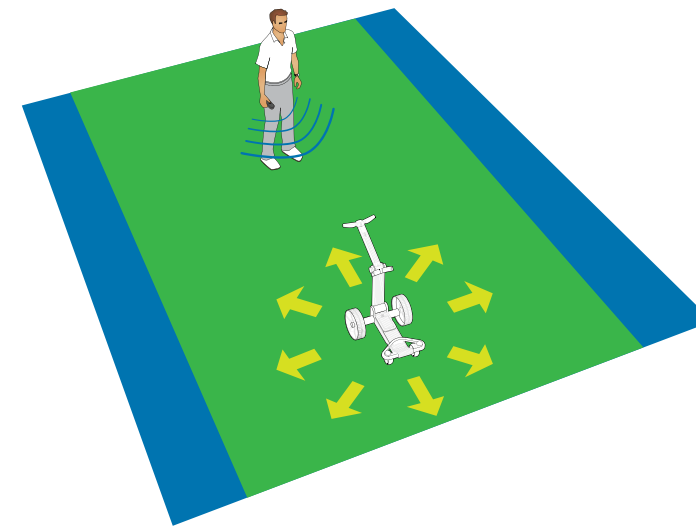

Blue Indicator Lights

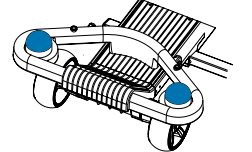


Rear Wheel Setting:


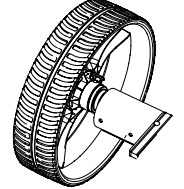


Inner Groove


MODE 4: FOLLOW (BETA)

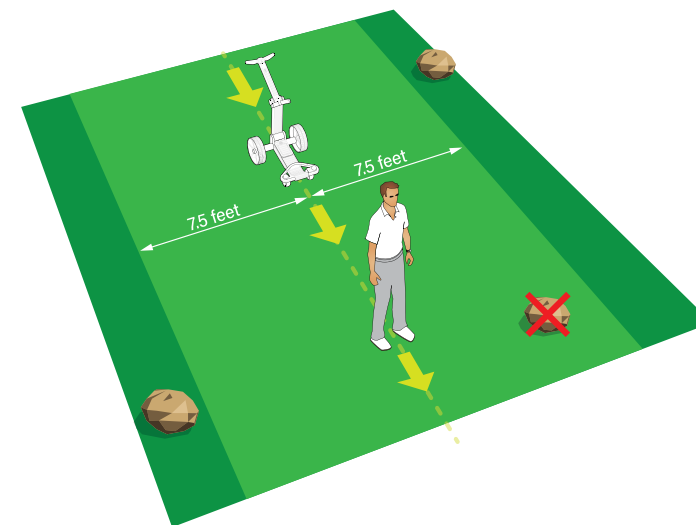

Flashing Green Indicator Lights

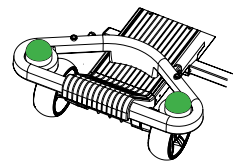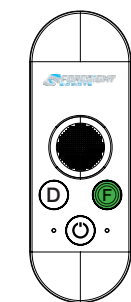

Rear Wheel Setting:

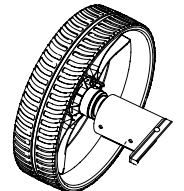

Inner Groove


Operating Your ForeCaddy



MODE 2: POWER ASSIST


To move the ForeCaddy forward, press the  button.

Press  to increase or decrease the ForeCaddy's speed.

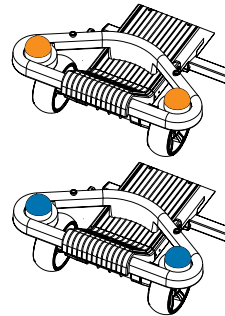Press  to stop.



Alternatively, you can exclusively use the  button by pressing and holding it down to move the ForeCaddy forward and releasing it to stop. The ForeCaddy will (by default) restart at the same speed as its last session. In Power-Assist mode there are 5 speeds that can be selected to match your desired walking rate (see chart below). When the ForeCaddy is stopped and in Power Assist mode, press the  button to release the brake to use the ForeCaddy in "free wheel" mode.

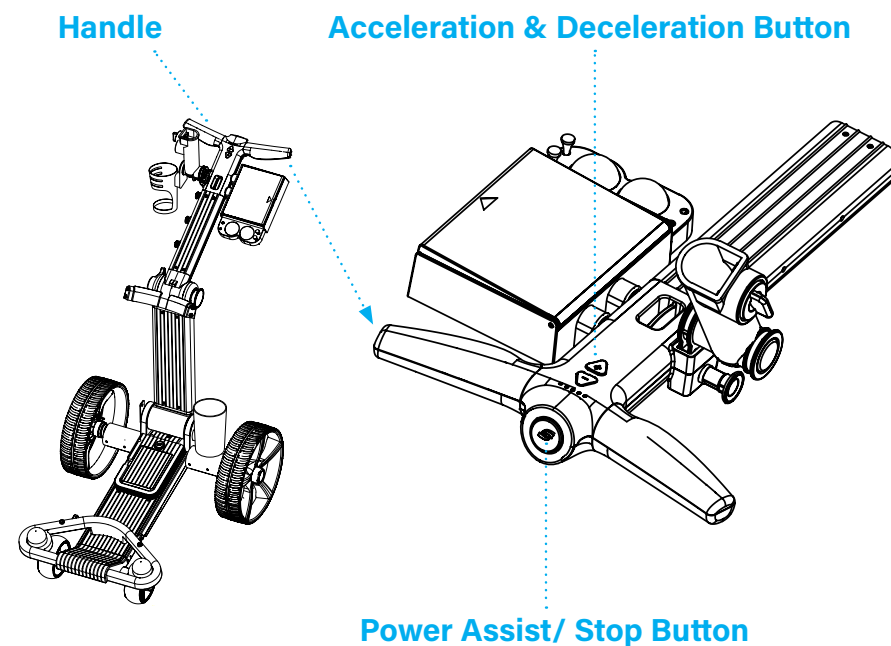

Speed Chart

- 1st** – 3.3 k/m per hour (2.05 mph)
- 2nd** – 4.2 k/m per hour (2.61 mph)
- 3rd** – 5.0 k/m per hour (3.1 mph)
- 4th** – 5.9 k/m per hour (3.6 mph)
- 5th** – 6.7 k/m per hour (4.2 mph)



Safety recommendations for Power Assist mode

While in Power Assist mode, the following safety precautions should be followed:



- 1 The ForeCaddy should always be steered manually when making a turn. When making a sharp turn, push the handle down to lift the front of the ForeCaddy upward to assist turning.
- 2 On complex turns or road sections, when the ForeCaddy is stopped, press the deceleration button to switch into neutral mode. This makes it easier to maneuver if you need to stop the ForeCaddy (without sliding). To resume Power Assist mode, press the Power Assist button again after pushing or pulling the ForeCaddy.
- 3 When the ForeCaddy is connected to the remote control in a stopped state, press the acceleration button to move the ForeCaddy forward automatically. Press the Power Assist button or the stop button on the remote control to stop the ForeCaddy. The ForeCaddy will automatically switch to standby mode if its distance from the remote exceeds 10 feet.

Operating Your ForeCaddy

MODE 2: REMOTE CONTROL

To enter the Remote Control mode, quickly press the **(D)** button (the button will illuminate blue).

In Remote Control mode, use the control stick to control the speed and direction of the ForeCaddy. Move the control stick back to the middle or press **(P)** to stop the ForeCaddy.

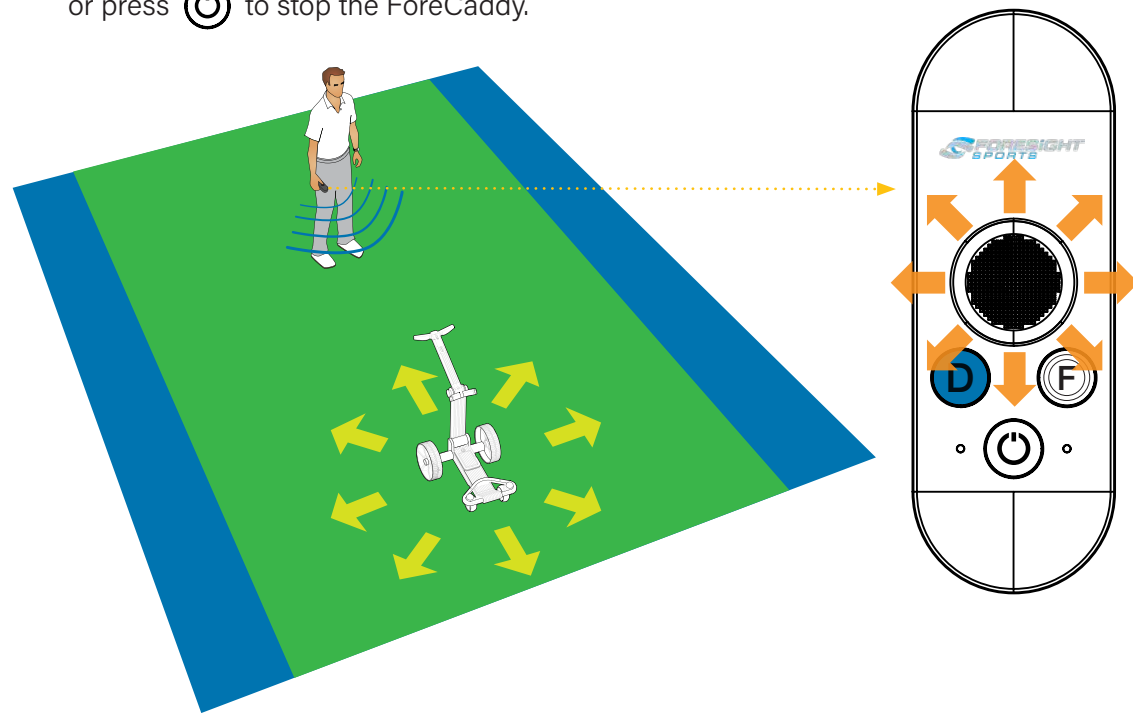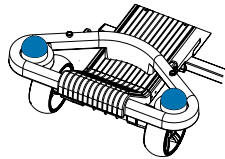

Note: You can use the Remote Control mode on open fields or fairway.

Safety recommendations for Remote Control mode

While in Remote Control mode, the following safety precautions should be followed:

1. Practice operating the ForeCaddy in a field or large, obstacle-free area prior to using on the golf course.
2. Always inspect your environment for potential obstacles or dangers prior to operating in remote mode.
3. Never operate the ForeCaddy remotely near vehicular traffic (roadways) or in areas with dense pedestrian traffic.
4. Never operate the ForeCaddy remotely on steep hills, near water features, or other natural or man-made obstacles that may result in damage or injury.
5. Immediately disengage the ForeCaddy from Remote Control mode in the event of a potential accident, or if an accident has occurred.

Operating Your ForeCaddy



PLEASE NOTE: Follow mode is still in BETA.




The Follow mode is undergoing testing and development and therefore requires skilled use and thoughtful execution. Please use caution when using the ForeCaddy in Follow mode (BETA).

MODE 3: FOLLOW (BETA)

To activate Follow mode, stand IN FRONT of the ForeCaddy.

Press the **F** button and then begin walking (the button will illuminate green).

The ForeCaddy will begin to follow, and will maintain the speed you are walking.

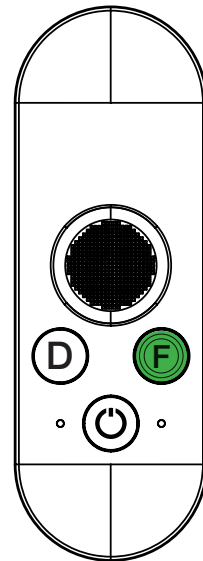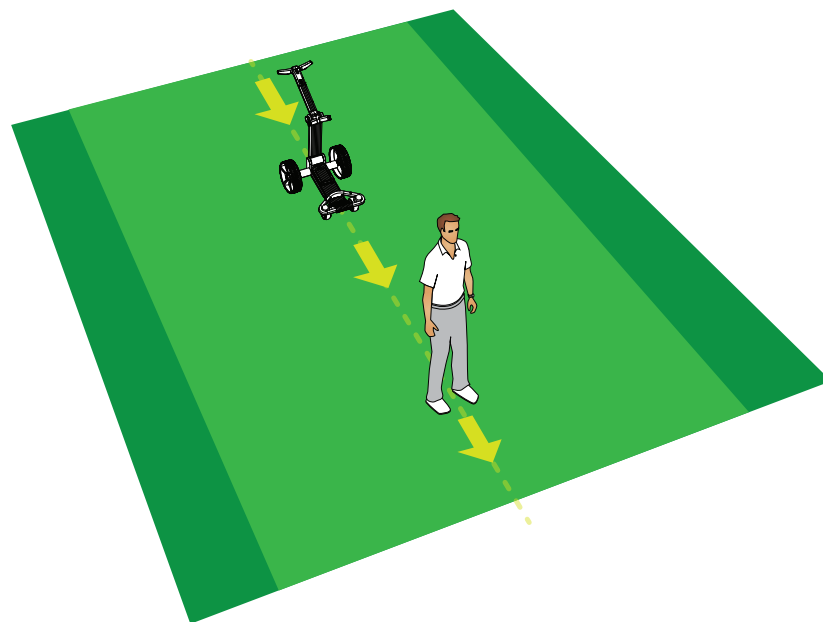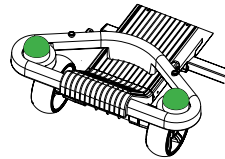

To exit Follow mode, come to a stop and allow the ForeCaddy to come to a rest, then simply press the **D** button on the remote to instantly switch to Power Assist mode (Blue).

To resume Follow mode, simply press **F** and the ForeCaddy will resume following.

WARNING: Follow mode must only be used on an open field or fairway.

Safety recommendations for Follow mode


While in Follow mode, the following safety precautions should be followed:

1. NEVER use Follow mode when the golfer is behind the ForeCaddy. Always make sure there are no obstacles between the ForeCaddy and remote control prior to use.
2. NEVER use Follow mode around tee boxes, greens, or steep terrain. Use Follow mode ONLY when past the teeing area and before the green. (For more information, see mode usage on page 16.)
2. For best results, be sure to wear the remote control on a belt on the backside of the hip to insure it has close, unobstructed access to the cart. You don't need to see the buttons to operate them; simply practice switching from green to blue and back again by pressing each button on the remote.

Operating Your ForeCaddy

Safety clearance in Follow mode (BETA)


While using Follow mode BETA, always allow for 7.5 feet of obstruction-free space on both sides of the ForeCaddy for safe operation.

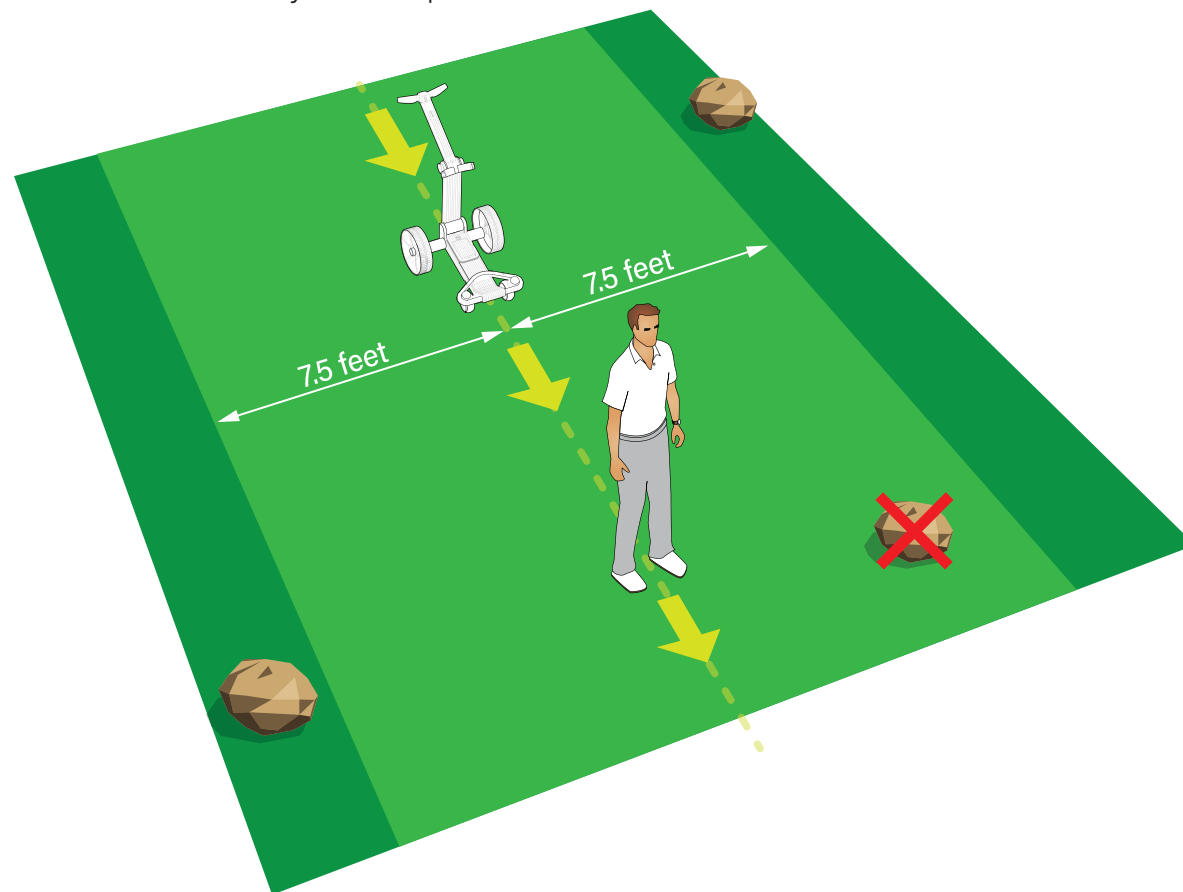

Note: It is normal for the ForeCaddy to “weave” slightly while in Follow Mode (BETA). When encountering obstructions that may be close to this 15 foot-wide safety zone, reduce your walking speed. The cart will also slow down and will weave less.

Operating ranges in Follow mode (BETA)

Please observe the following range limits when operating the ForeCaddy in Follow mode.

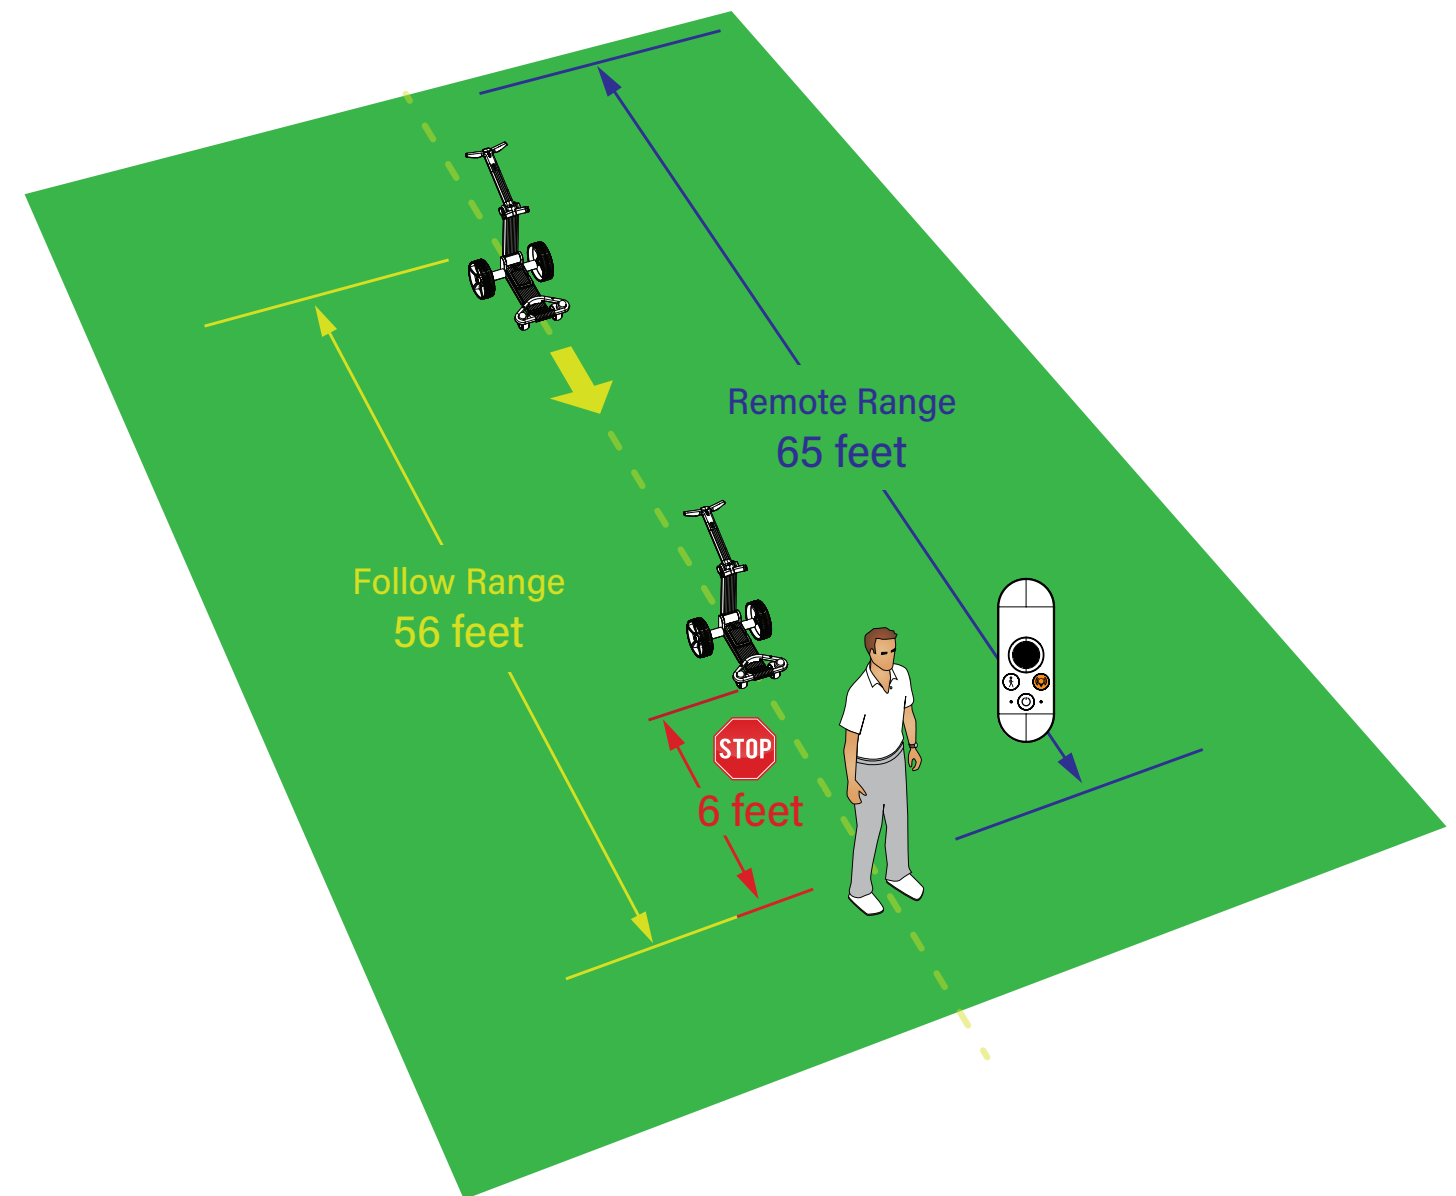


Operating Your ForeCaddy

Proper mode usage on the course

Please follow proper mode usage while using the ForeCaddy on the golf course.




Only use the Follow mode on the fairway. Be sure to check your surroundings for any hazards. It is safe to use the manual push mode or Power Assist mode while using the ForeCaddy in the Tee area or around the Green.

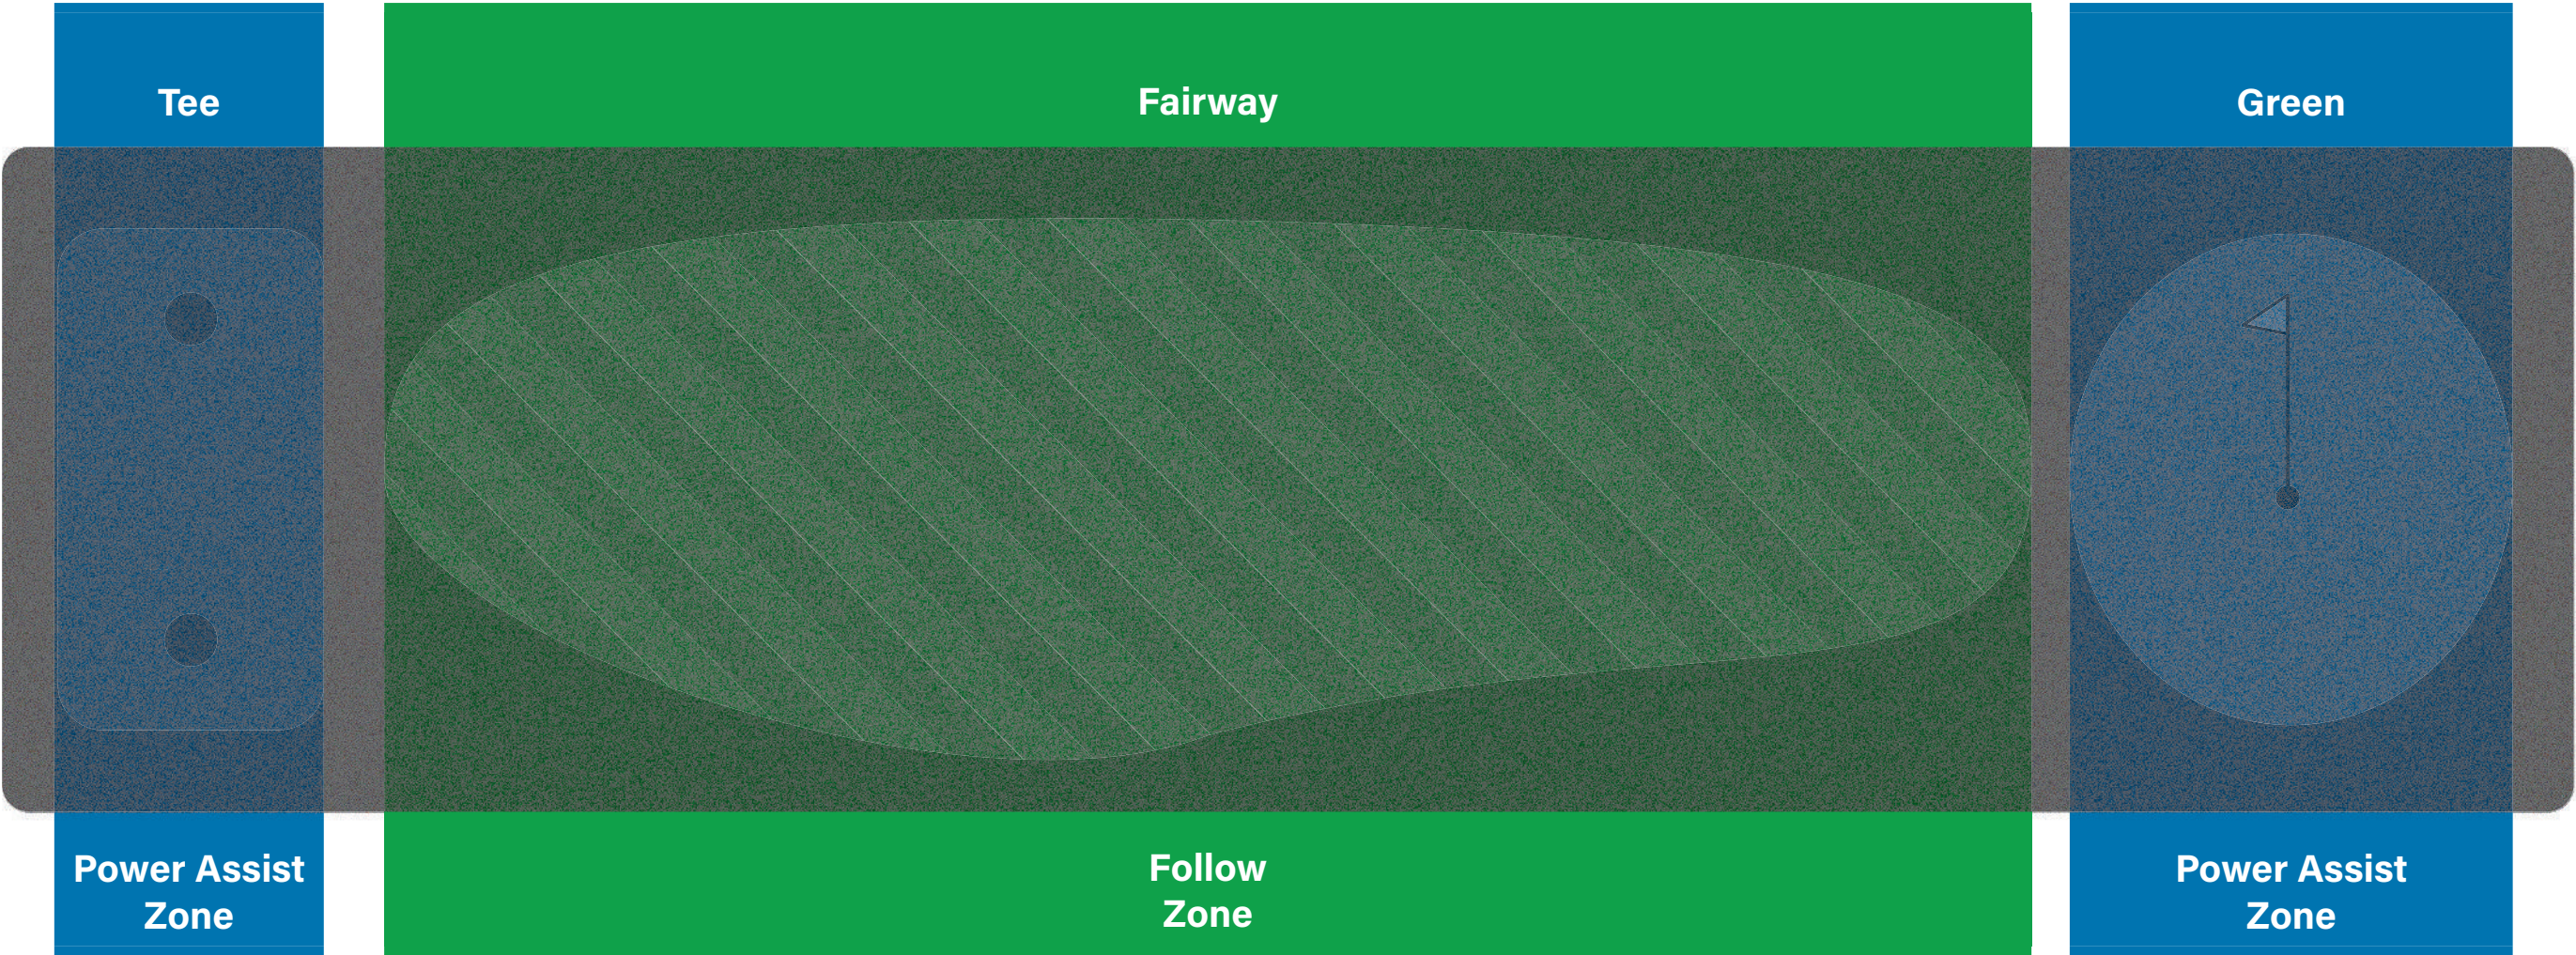

Operating Your ForeCaddy

Rear wheel - mode settings

1. To install or remove the rear wheel, press on part A and rotate the wheel.
2. When the ForeCaddy is in ANY powered mode (Power Assist, Remote, Follow BETA), the rear wheels need to be installed in the INNER groove.
3. When the ForeCaddy is in manual mode, the rear wheels need to be installed in the OUTER groove.

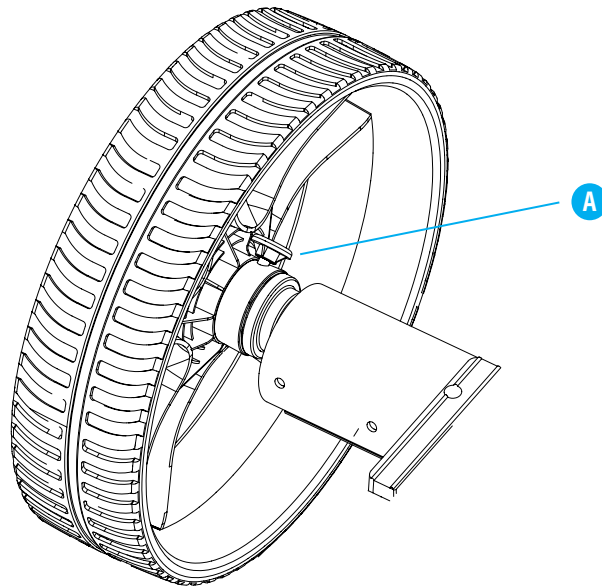


Note: When the ForeCaddy is out of battery or powered off, you can use manual mode for long distance walks.

Installing Accessories

Installing the (accessory) umbrella holder


1. Pull knob A to install or remove the umbrella holder.
2. When the umbrella holder is installed, place the handle into the holder, then rotate knob C to keep the umbrella fixed.
3. Press on knob B to adjust the angle of the umbrella and release it after the desired angle has been reached.

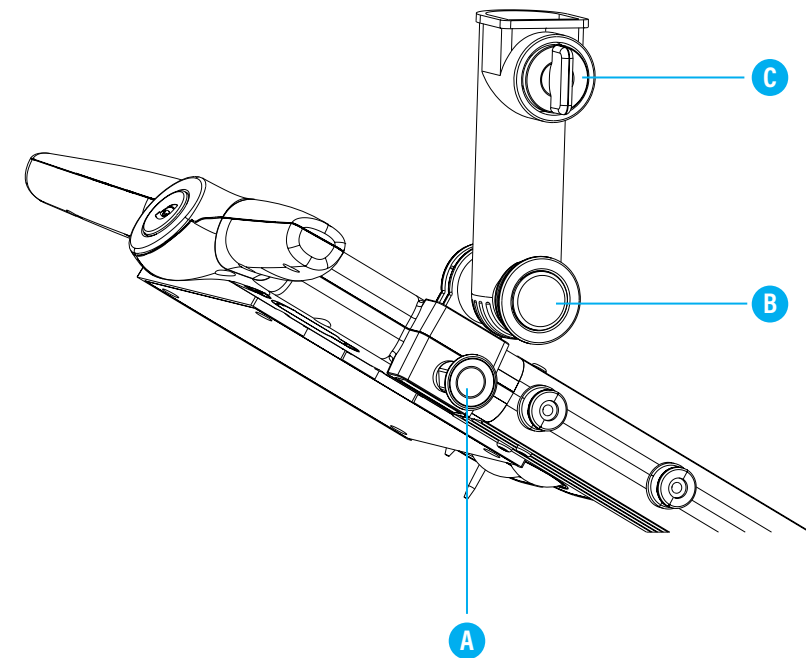

Installing Accessories


Installing the (accessory) scorecard/ball holder

1. Hold the Scorecard/Ball Holder with the Foresight Sports Logo right side up and facing toward you.
2. Slide the two pegs on the left side of the Scorecard/Ball Holder over the pegs protruding from the cart.
3. The Scorecard/Ball Holder also has a slot to store the remote control.

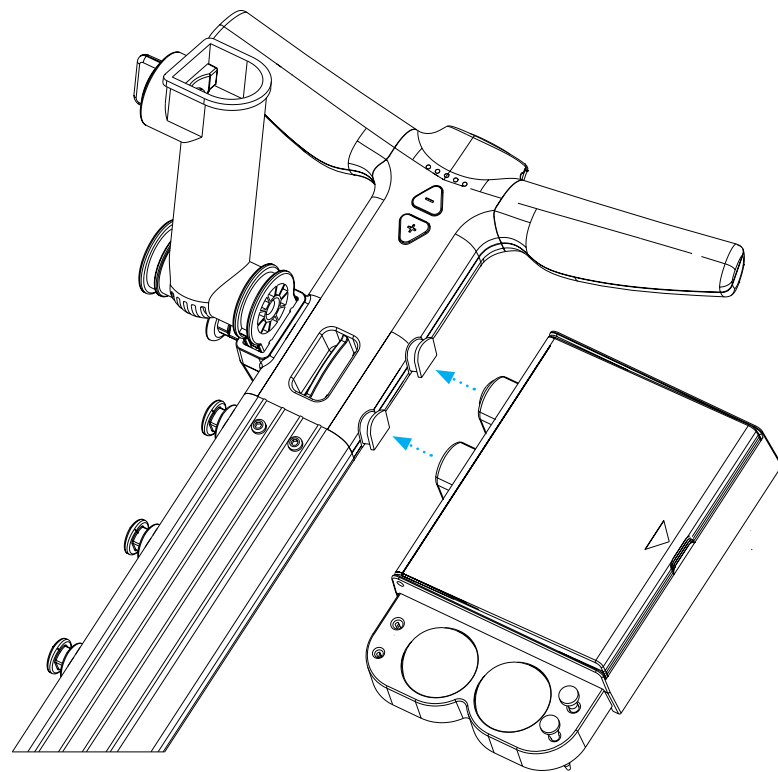

Installing the (accessory) cell phone holder

1. Insert clip A into slot C on the ForeCaddy
2. Press button B to open the phone securing arms. When phone is placed in the holder it will automatically adjust to your phone's size.
3. Plug in the USB-C cable from the bottom of the Cell Phone Holder to slot D on the ForeCaddy.

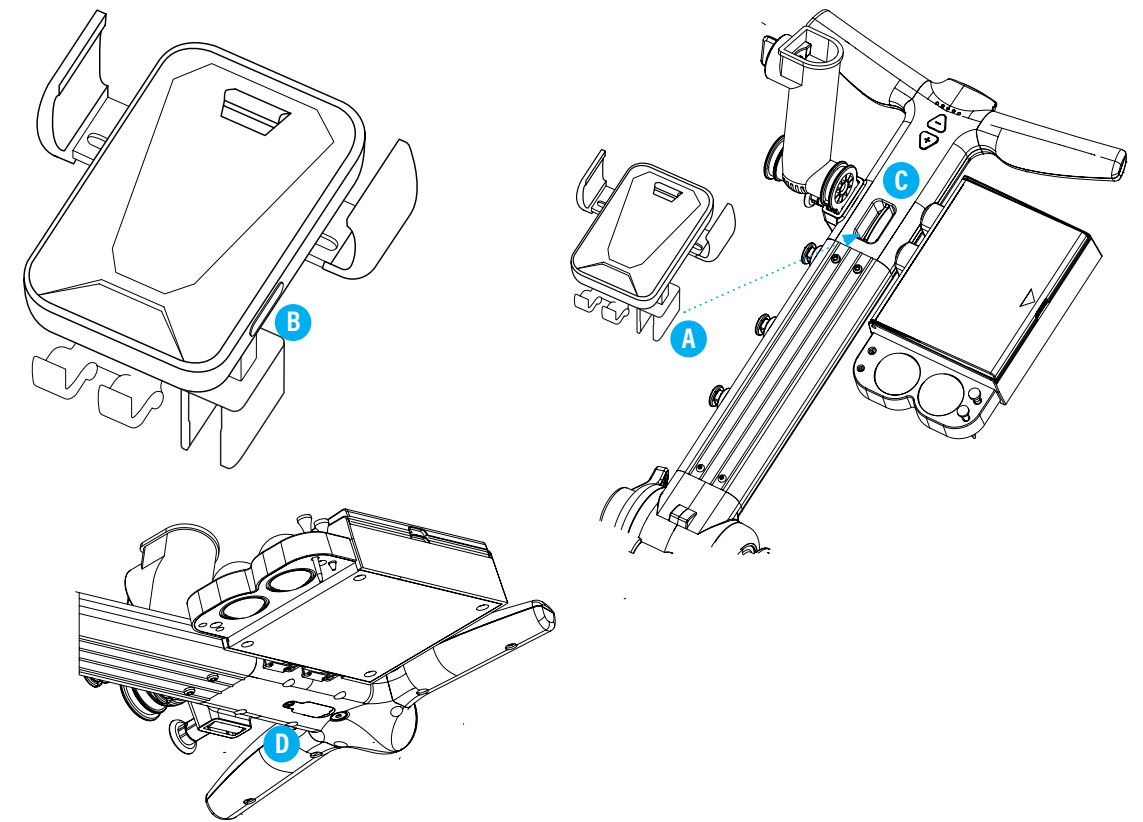

Mode/Operation Status Indicators

The ForeCaddy status lights indicate the following:

ORANGE


Indicates the remote control is not on or not connected to the ForeCaddy.
(Only the Power Assist mode can be used in this state.)

BLUE

Indicates the remote control is connected to the ForeCaddy.
The ForeCaddy is not in Follow mode.

FLASHING GREEN


The ForeCaddy is in Follow mode.

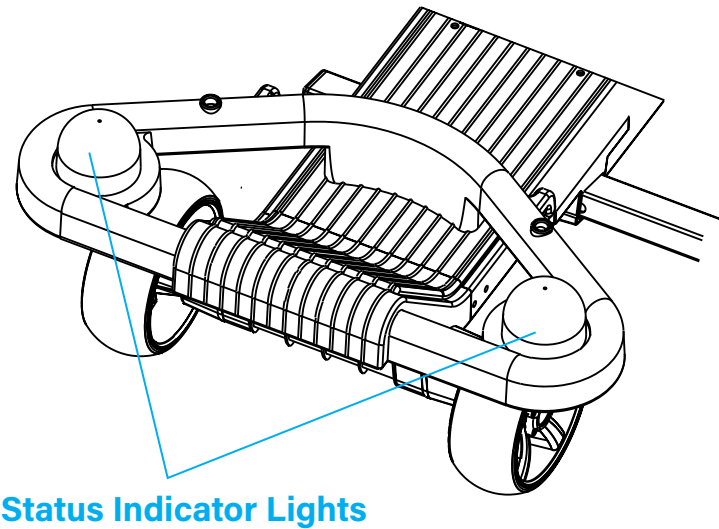

Battery & Charge Indicators


ForeCaddy Battery Indicator

- In fully charged state, all 5 lights will turn **GREEN**.
With power consumption, the lights will gradually go out.

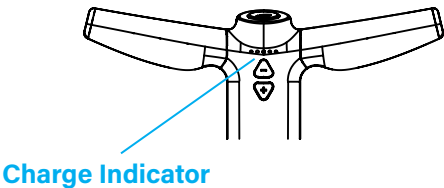


ForeCaddy Charging Indicator

- RED** Charging
- GREEN** Fully Charged

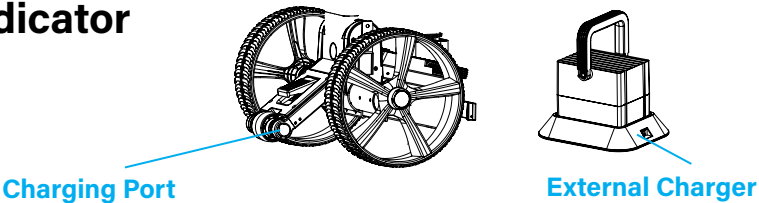

Remote Battery Indicator

- GREEN** Normal use, battery power is more than 50%
- ORANGE** Battery power is lower than 50%
- RED** Battery power is less than 10%

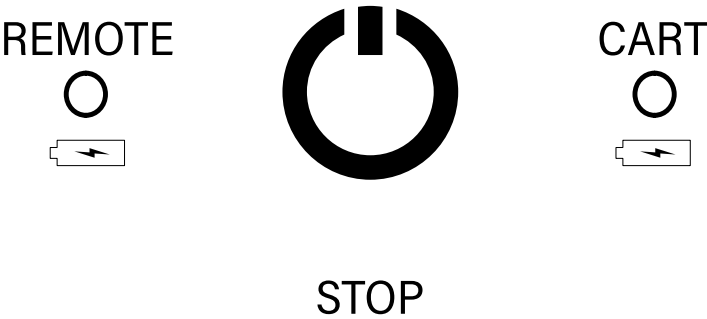


Remote Control & ForeCaddy Power Indicator

Remote Control Charging Indicator

Charge the remote control via the USB Type-C port.

The remote control will send a vibration prompt when charging. During the charging process, only the power button on the remote control remains functioning.

The indicator light will be blinking **RED** when the remote control is charging.
The battery is fully charged when the indicator light turns **GREEN**.

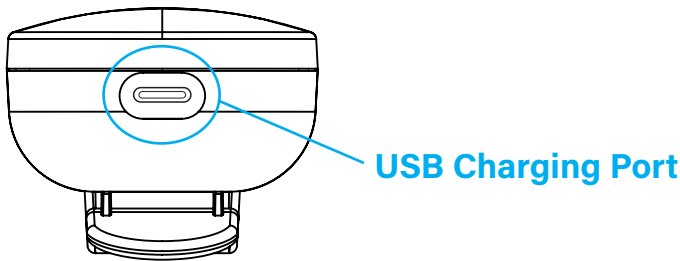

| | |
|-------------------------------------|------|
| Note: ForeCaddy Full Charging Time: | 8hrs |
| Remote Control Charging Time: | 3hrs |

ForeCaddy & Remote Control

When the external ForeCaddy battery charging base is being used, or when the ForeCaddy is charged after it has been turned off, you can view the charging status based on the charging indicator light. **RED** lights indicate charging, and **YELLOW** lights indicate fully charged.

When using the charging port to charge the ForeCaddy battery, you will be able to view the charging status based on the power indicator lights on the handle if the ForeCaddy is turned on.

The remote control can be charged using a 5V charger or via the USB port on the ForeCaddy.

Note: When the remote control is charging via the USB port on the ForeCaddy, please make sure the ForeCaddy is powered on.

Additional Specifications

REMOTE CONTROL

| | |
|------------------------|----------------------|
| Transmitting Frequency | 6.5G |
| Transmitting Power | <-41.3dBm/MHz |
| Transmitting Distance | 65.6 ft (open space) |
| Remote Charger | 5V / 1A |
| Battery Capacity | 3.7V / 1000mAh |

FORECADDY

| | |
|-----------------------------|-----------------------------------|
| Battery Life | 36-54 holes (On non-hill fairway) |
| Folded Size | 2.69 x 1.97 x 1.15 ft |
| Open Size | 2.69 x 1.97 x 3.28 ft |
| Weight | 36 lbs / 16.3 kg |
| Speed | 4.7~7.8 km/h |
| Motor | Anti-tipping dual support motor |
| Braking | Automatic downhill braking |
| Operating Temperature Range | -4°F to 122°F |
| Battery Capacity | 22.2V / 14000mAh |
| Charger | 25.2V / 2A |

Questions?

To speak with one of our US support specialists,
please call +1 (858) 444-4440.

For all International support inquires, please contact your
local Foresight Sports dealer or support center.

For product updates and driver installations,
please visit www.foresightsports.com.





 **FORESIGHT**
SPORTS