

Gozo Electric Golf Caddy

USER MANUAL (GF07B)



GozoGolf.com



Video Tutorials

CONTENTS

SERIAL NUMBER	1
SAFETY INSTRUCTIONS	2
PARTS IDENTIFICATION	3
PREPARE THE GOLF CADDY FOR YOUR FIRST GAME	4
FOLD YOUR GOLF CADDY AFTER THE GAME	6
STATUS MONITOR	8
MULTI-FUNCTIONAL BUTTON	9
REMOTE CONTROL	10
CRUISE CONTROL MODE	11
AUTO-FOLLOW MODE	11
PHONE REMOTE CONTROL	12
CONNECT THE APP TO THE CADDY	12
ADJUST CADDY SETTINGS	13
REMOTE CONTROL RE-PAIR	14
BATTERY USE INSTRUCTIONS	15
CLEANING AND MAINTENANCE	16
SPECIFICATION	18
INSTALLING ACCESSORIES	19
CUP HOLDER	19
UMBRELLA HOLDER	20
INFORMATION ON DISPOSE	21

SERIAL NUMBER

Each GF-07 auto-follow golf caddy has a unique serial number for identification, warranty, and service support.

Location:

The serial number is on a label inside battery compartment.

Important:

Please record and keep your serial number. You may need it for warranty claims, service requests, or technical support.

If the serial number label is missing or unclear, please contact customer support:

Email: info@gozogolf.com

Phone: +1 437-326-4696

Record your serial number here: _____



SAFETY INSTRUCTIONS

To reduce the risk of injury, electric shock, or product damage, please follow these safety instructions:

- Do not disassemble the golf caddy.
- The caddy is not fully waterproof. Do not immerse it in water or other liquids.
- Do not use the caddy during thunderstorms or in extremely wet conditions.
- Keep the caddy away from fire, heat sources, and flammable materials.
- Only use manufacturer-certified battery packs.
- Turn off the power and remove the battery before cleaning, transporting, or maintenance.
- Check for damaged or loose parts before each use.
- Do not modify any part of the product. Unauthorized repairs or modifications may void the warranty.
- Electrical maintenance should only be performed by qualified personnel.
- Always operate the caddy at a safe speed and maintain control, especially on slopes, uneven terrain, or near obstacles.
- Regularly check that the wheels, brakes, and folding mechanisms are free from mud, dirt, or obstructions.


PARTS IDENTIFICATION



Golf Caddy Components:

- | | |
|-------------------------------|------------------------|
| 1. Golf Caddy Status Monitor | 9. Spring-Loaded Latch |
| 2. Multi-Functional Button | 10. Removable Battery |
| 3. Umbrella Holder | 11. Electric Motor |
| 4. Push Handle | 12. Front Wheel |
| 5. Cup Holder | 13. Upper Arm |
| 6. Bag Holder (Upper & Lower) | 14. Lower Arm |
| 7. Height Adjustment Latch | 15. Front Bumper |
| 8. Rear Wheels | |

PREPARE THE GOLF CADDY FOR YOUR FIRST GAME

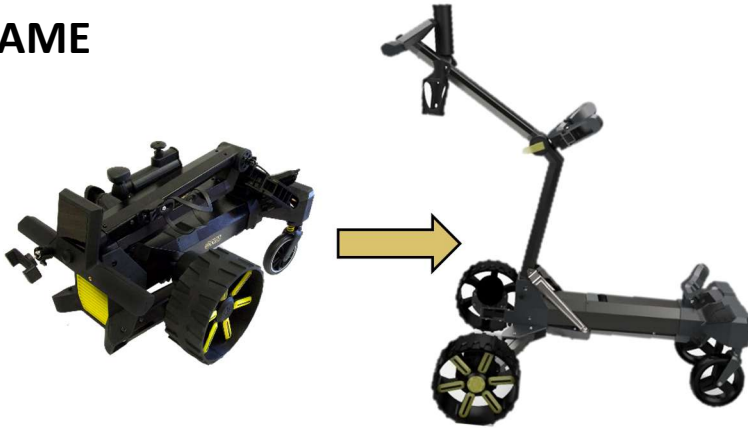

1. Place the caddy on the ground

Put the folded Golf Caddy on a flat, stable surface with enough space to unfold it.

2. Release the spring-loaded Latch

Pull the latch knob outward and rotate it 90° to the unlocked position.

3. Unfold the caddy

Lift the lower arm upward until the rear section is fully open. The built-in spring assist should make unfolding easy.

Note: *If it is difficult to unfold, check that the spring-loaded latch is unlocked.*



Locked Latch



Unlocked Latch

4. Lock the spring-loaded latch

Once the caddy is fully unfolded, rotate the latch knob 90° back to the locked position.

Note: *If the latch does not lock, make sure the lower arm is fully extended.*

5. Adjust the handle height

Unlock the height adjustment latch. Lift the upper arm to the desired height, then lock the latch again.

Note: *If the connection feels loose, turn the knob on the left side to tighten it.*

6. Attach the Golf Bag

Place the bottom of the golf bag against the front bumper. Lay the bag onto the bag holders, then secure it with the upper and lower straps.


7. Power on the caddy

Press and hold the multi-function button until the display turns on.

The caddy will start in locked mode and is ready for use.

Note: *Always unfold the golf caddy on a flat, stable surface to avoid injury or damage.*

FOLD YOUR CADDY AFTER THE GAME

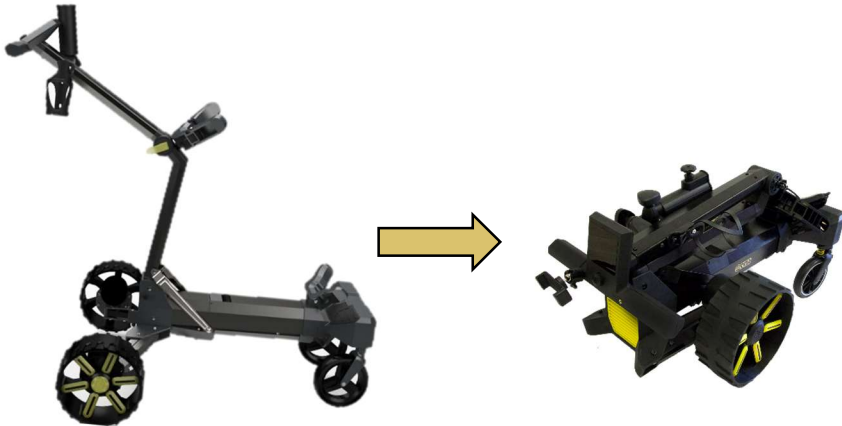

1. **Place the golf caddy on the ground**
Make sure the caddy is on a flat, stable surface.
2. **Power off the caddy**
Press and hold the multi-function button until the display turns off.
3. **Remove accessories**
Remove the golf bag, umbrella, and any other attachments.
4. **Fold the upper arm**
Unlock the height adjustment latch and gently fold the upper arm downward.
5. **Release the spring-loaded latch**
Pull the latch knob outward and rotate it 90° to the unlocked position.
6. **Fold the caddy**
Press the lower arm down toward the caddy body. The rear wheels should fold inward at the same time.


Note: *If it is difficult to fold, make sure the spring-loaded latch is unlocked. Do not use excessive force.*

7. Lock and store

Once the caddy is fully folded, rotate the spring-loaded latch 90° back to the locked position. Make sure the frame is fully locked before storage.

Note: *Clean and dry the caddy before storing. Always fold it on a flat, stable surface to avoid injury or damage.*

STATUS MONITOR

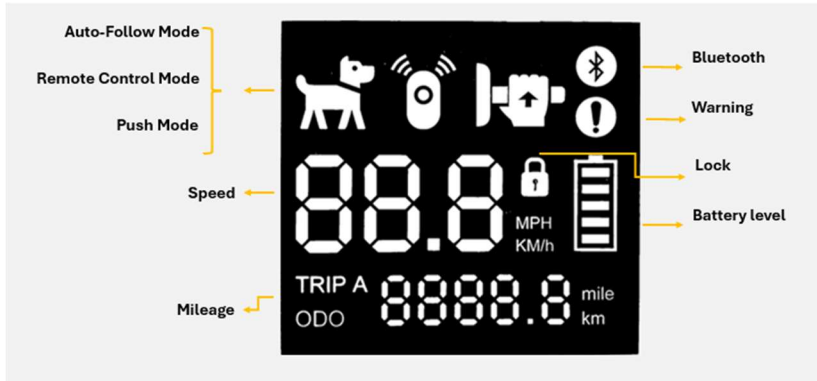

When the caddy is powered on, the display shows:

- **Mode:** Shows the current mode — Auto-Follow, Remote Control, or Push Mode.
- **Speed:** Displays the current speed level.
- **Mileage:** Shows the distance traveled.
- **Bluetooth Icon:** Indicates the caddy is searching for or connected to your phone.
- **Warning:** Displays alerts or system warnings.
- **Lock:** The caddy is locked and cannot move. Unlock it using the remote control or multi-function button.
- **Battery Level:** Displays the remaining battery charge.

MULTI-FUNCTIONAL BUTTON



The multi-function button is the round button below the status monitor. It controls several functions:


Power On/Off: Press and hold for 2 seconds to turn the caddy on or off.

Lock/Unlock: When the caddy is powered on, press once to unlock it. Press again to lock.

Mode Switch: Double-click to turn **Push Mode** on or off. The Push Mode icon lights up when active.

Speed Adjustment: In Push Mode, rotate the button counterclockwise to increase assist speed, or clockwise to decrease it.

REMOTE CONTROL

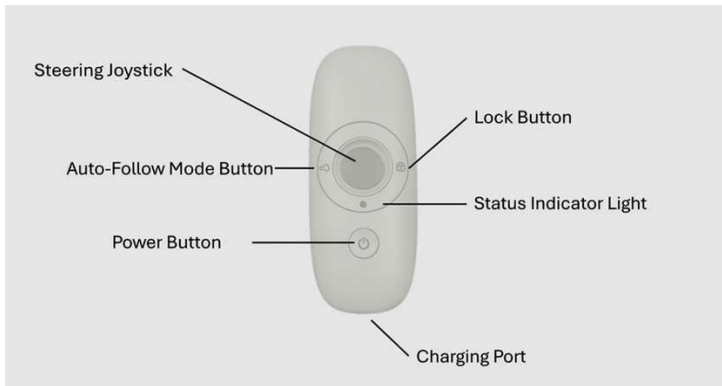

Power Button

Press and hold to turn the remote on or off. When the remote turns on, the indicator light turns blue and the remote vibrates once.

Notes: *The indicator light turns off when the remote is powered off. The light turns red when the battery is low and needs charging.*

Lock Button

When caddy is powered on, press the lock button to lock or unlock it.

Lock: The lock icon appears on the display, and the caddy will stop and not respond until unlocked.

Unlock: The lock icon disappears, and the caddy is ready for use.

Steering Joystick

When the caddy is unlocked, move the steering joystick to control the caddy's direction, the caddy will be switched to **Remote Control Mode** accordingly.

Note: *The remote control has priority over the phone app controller.*

CRUISE CONTROL MODE

When the caddy is unlocked and the remote is on, push the steering joystick upward twice to enter Cruise Control. The caddy will move at a preset speed (Default: 4km/h). In Cruise Mode:

- Push the joystick upward once to increase to preset speed 2.
- Push the joystick upward again to increase to preset speed 3.
- Use the joystick to steer while the caddy maintains a constant speed.
- Push the joystick fully downward once to exit Cruise Mode. The caddy will stop.

Note: Cruise Speed is adjustable in Gozo App.



Auto-Follow Mode

Auto-Follow Mode

Press the auto-follow mode (Dog) button once to activate the Mode. The dog icon lights up on the display, and the status indicator light turns green.

Note: *Keep the area between the caddy and the remote clear of obstacles or people. Point the top of the remote toward the caddy.*

Charging Notes

The remote has a rechargeable lithium battery. Charge it ONLY with the provided cable and charger. The power button shows a red breathing light while charging and turns green when fully charged.

Important Note: *When parking on a slope, keep the caddy powered on and set it to Locked mode. Do not turn off the power, as this will disable the electric braking system.*

PHONE REMOTE CONTROL

CONNECT THE APP TO THE CADDY

1. Scan the QR code to download the Gozo App.
2. Enable Bluetooth on your phone.
3. Press and hold the multi-function button for 2 seconds to turn on the caddy.
4. Open the app, the app will automatically search for nearby devices.

Note: *If no device is found, make sure the caddy is powered on and Bluetooth is enabled. Then tap **Re-Searching** to search again.*

5. Select your caddy from the device list to connect.
6. Once connected, click the Remote-control button, then slide the cursor to move the caddy.


Important: When the app is connected, the remote control can also operate the caddy.



Download on the App Store



Get it on Google Play

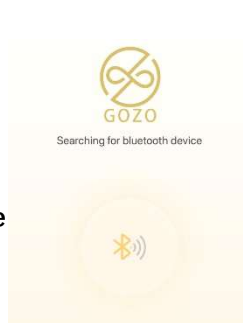

Connect Page



 
Main Interface

ADJUST CADDY SETTINGS:

1. Connect your phone to the caddy and enter the main interface in the Gozo app.
2. Tap the Settings icon located in the bottom-right corner.
3. On the Settings Page, you can adjust:
 - **Cycling sensitivity** – Adjust how quickly the caddy responds to steering input. The higher the value, the more responsive the cart.
 - **Follow distance** – Set the preferred distance in Auto-Follow Mode (Default: 1.5 m).
 - **Cruise Control** – Set the constant cruising speed level for Cruise Mode. The default levels are 4 km/h, 6 km/h, and 7 km/h.



Main Interface

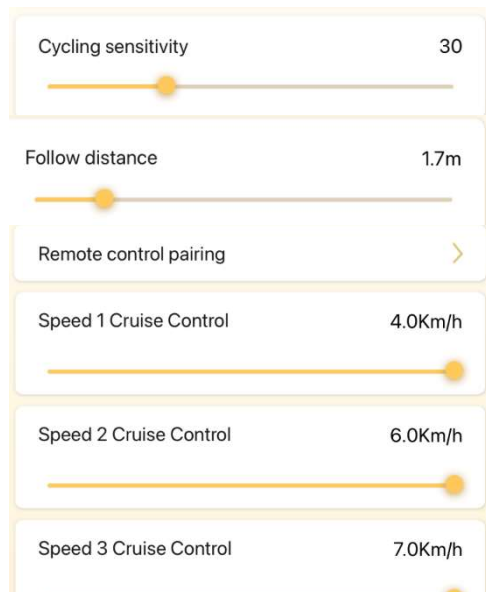


Settings Page

REMOTE CONTROL RE-PAIR:

The remote control is pre-paired with the golf caddy. You can re-pair it through the Gozo app if needed.

 1. Connect your phone to the caddy and open the main interface in the Gozo app.
2. Tap the Settings icon in the bottom-right corner.
3. Tap the **Remote control pairing**. Your phone will vibrate, the caddy speed display will show “6.1” and the lock icon on the caddy will appear, indicating pairing mode.
4. Make sure the remote is **powered off**.
5. Press and hold the Auto-Follow Mode button and the Lock button at the same time.
6. While holding both buttons, press and hold the Power button to turn on the remote.
7. Once pairing is successful, the remote control will vibrate, the speed display on the caddy will show “0.0”, and the lock icon on the caddy will turn off.

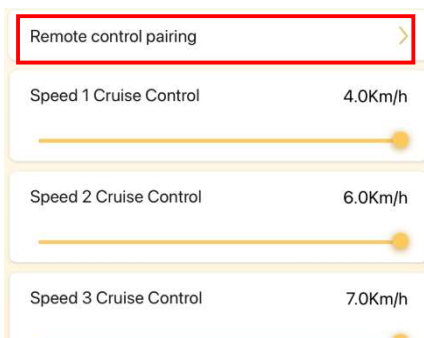

Settings Page


BATTERY USE INSTRUCTIONS

Removal: Pull the battery handle upward to lift and remove the battery from the caddy.

Installation: Pull the battery handle upward and insert the battery into the battery compartment. Then gently release the handle to secure it.



Charging: Only use the included Gozo charger. Open the dust cover and plug the charger into the charging port. The charger light is red while charging and turns green when fully charged. Close the dust cover after charging.

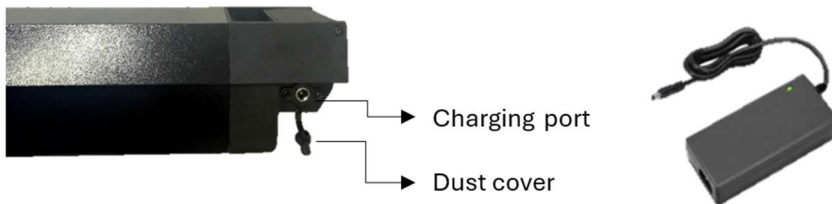

Water Resistance: The battery is splash-resistant, but it should not be exposed to strong water spray, heavy rain, or immersion in water.

CLEANING AND MAINTENANCE

CADDY

- Wipe the caddy with a soft, damp cloth to remove dirt or stains.
- Do not use alcohol, gasoline, kerosene, or other corrosive or chemical cleaners.
- Do not use a water hose or power washer, as this may damage electrical components.
- Turn off the caddy when not in use.
- Store in a cool, dry place with humidity below 65%.
- Storage outside against recommended conditions may damage components and shorten the caddy's lifespan.

Warning: Improper cleaning or storage may damage the caddy and shorten its service life.

BATTERY

- **Remove the battery when not in use.**
- Use only manufacturer-certified battery packs.
- Store in a cool, dry place with humidity below 65%. Recharge every 60 days during long-term storage.
- Keep protective covers on charging connectors when not in use.
- Handle the battery carefully during installation and removal to avoid damage.
- Do not open, modify, short-circuit, force discharge, or reverse-connect the battery.
- Keep the battery away from moisture, liquids, and immersion in water.

SPECIFICATION

Weight (without battery)	30.5 lb
Battery Weight	5.4 lb
Folded Size (GF07B)	30" L × 19" W × 14" H
Unfolded Size	37" L × 28.5" W × 42" H
Max Load	25 kg
Max Climb	40°
Battery Capacity	327.6 Wh Lithium
Battery Life	36 holes per charge
Charge Time	6-8 hours
Material	Aluminum & Nylon
Operating Modes	Auto Follow, Remote Control, Push-Pull
Warranty	2 years

INSTALLING ACCESSORIES

CUP HOLDER

- Place the round opening of the cup holder bracket over the screw.
- Slide the bracket downward until it snaps into place. Some force may be required.


Note: *The cup holder bracket is flexible and can be gently opened to fit different bottle sizes.*



Adjustable water bottle cage

Umbrella Holder


- Locate the preinstalled bracket on the upper arm of the caddy.
- Place the umbrella holder into the bracket.
- Tighten the knob attached to the screw to secure it.
- The larger knob adjusts the umbrella holder angle.
- The smaller knob secures the umbrella in place.

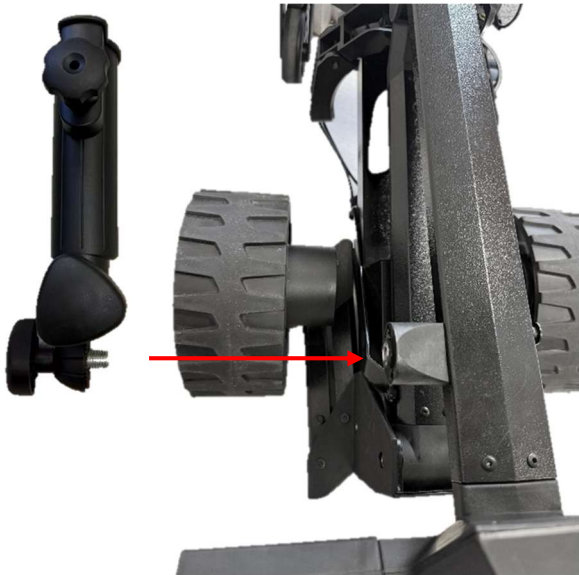

INFORMATION ON DISPOSE

If you need to dispose of the golf caddy, follow your local disposal regulations. Contact your local waste management or recycling center for proper instructions.

Proper disposal helps protect the environment and ensures materials are recycled responsibly.

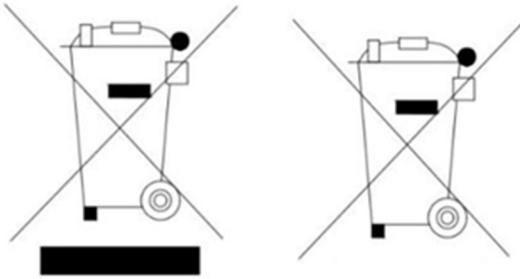



GozoGolf.com



Follow us on Social Media:

@GozoGolf



GOLF SMARTER, NOT HARDER

Phone: +1 437-326-4696

Email: sales@gozogolf.com

Main Office:

**1329 Matheson Boulevard East,
Mississauga, ON L4W 1R1, Canada**

US Office:

**254 Melrose Landing Blvd,
Hawthorne, FL 32640, USA**