

QUICK START GUIDE

7. Folding

Step 1. Lift the front wheel with your left hand while simultaneously pulling up the columnar knob to fold the front wheels.



Step 2. Grasp the U-shaped knob with your right hand at the lower joint, pull upward to release the lock, then gently fold the upper joint upward. Note: Use your left hand to stabilize the upper section throughout the movement.



Step 3. Press down on the golf bag's upper stand release switch with your thumb and push to lock the upper joint to the left simultaneously.



8. Unfolding

Step 1. Release the straps, unlock the key on the upper golf bag bracket to release the upper joint from the front wheels.



Step 2. Lift the upper pillar to a steady casing and the U knob locks in.



Step 3. Extend the front wheels until the voice "KA" and the columnar knob locks in.



6. Useful Tips

(1) Remote Pairing

Step 1: Press and hold both the Unlock button and the STOP button for long time until the indicator light change to blue breathing light and the remote will vibrate for 0.5 seconds.



Step 2: Within 3 seconds after powering on the cart, press and hold the left + right buttons on the control panel for 1 second.



(2) Check Remote Battery

Long-press both the left (←) button and STOP button on the remote. The cart screen will display the remote battery level (1 to 4 bars). 4 bars indicate full power.



(3) Changing the Broadcast Mode

Long-press the Follow button/left button on the handle bar for 5 seconds. The system will cycle through the three broadcast modes: Single Mode → Silent Mode → Normal Mode.



1. What's in the box?



2. Quick Set-up

Step 1: Install the two rear wheels. Each rear wheel should firmly hold the Knob and be paired with its corresponding slot.



Step 2: Release the straps and unlock the part of front wheels.



Step 3: Fully extend the entire column to its proper position.



Step 4: Expand the front wheel by pulling the Knob.



3. Charging & Battery

Charging Indicator Light
To charge the battery, connect the battery to the charger. When the charger indicator light is red, the battery is Charging. When the charger indicator light turns green, the battery is fully charged.



Battery Level
Press the battery's power button to check the charge level. The 4-bar indicator shows:
4 bars: Full (75%-100%)
3 bars: Medium (50%-75%) – Monitor charging
2 bars: Low (25%-50%) – Charge soon
1 bar: Critical (<25%) – Charge immediately to protect battery




Power On
Press and hold the Stop button on the handle for 3-5 seconds to power on the Robera Pro, then you need to wait about 30-40 seconds for the software to boot up until you hear "AI Ready".

4. Operating Guide

(1) Remote Control

To use the remote, press the unlock button to activate it. After use, short-press the right lock button until red light appears for safety. In any emergency, press the red STOP button immediately.

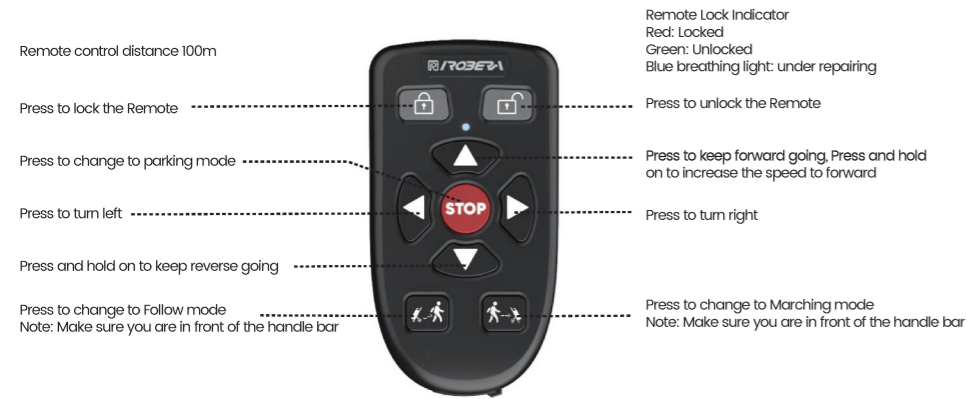

(2) Push/Speed Control

Rotate the "stop" button on the handle to the left, Sign P (Means it's in the braked state) on the screen disappears, then you can manually push it. Then rotate the "stop" button again to the right to choose the speed (H1- H9), then it moves forward automatically.



(3) Follow Me Mode

Through AI camera recognition, the cart automatically follows the player's movement, providing a true hands-free golfing experience.

To activate Follow Me Mode, stand about 0.5 meters in front of the cart and press the right button on the handle for 1 second until you hear "Start Following".

In the following situations, the cart will stop and auto rotate in place to keep the camera locked on the player. When the player moves more than 3 meters away, the cart will automatically resume following.

- * Player walks back toward the cart within 30 cm of the camera (Typical scene: taking or returning clubs).
- * Stepping back after hitting a shot (requires enabling this function in the App).

In the following situations, the cart will stop completely and will not auto-resume.

To resume Follow Me, use gesture control or press the Follow button.

(Recommended near the green or during emergency situations.)

*Stopping via gesture control.

*Pressing the Follow button on the cart handle or remote.

Pressing any button other than the Follow button will exit Follow Me Mode.



(4) Marching Mode

Marching Mode is a reverse following mode where the cart stays in front of you. You control the cart's direction by moving your body.

To activate Marching Mode, stand about 0.5 meters in front of the cart and press the right button on the handle for 1 second until you hear "Start marching".

To stop/restart Marching mode please use hand gestures or the remote.



(5) Gesture Control

A single hand gesture is used to start and stop the cart under Follow Me and Marching modes. Simply face your open palm toward the camera.

How to Use: Hold your open palm toward the camera for 0.5 seconds, stand 1-3 meters from the cart, and keep your hand in front of your body—not to the side or behind you.



Notes:

- Keep hands glove-free, below camera height, and 2 meters away.
- Avoid direct sunlight, white clothing, and skin-tone matching outfits.

(6) Auto Stop on Approach

In follow me mode, the cart will stop automatically if any object is detected close to the handle's camera less than 0.3m to prevent collisions.

(7) Auto Reverse on Shot

In Follow Me mode, when the cart is close to you and detect your swing posture, it will be far away from you 1-2m automatically.



(8) Auto resume following

Manually stopping the cart (via button press or gesture) disables auto-resume when you walk away. However, auto-resume will occur if the cart stops due to reverse retreat or proximity (<0.5m), provided you exit the 3m range.



5. Changing the Default Settings via APP

Step 1: Searching "ROBERA" in APP store or Google Play to download and install the Robera app.




Step 2: Turn on the golf cart and wait until you hear "AI Ready".

Step 3: Long-press the right button until you hear "Bluetooth pairing".




Step 4: Open the app, tap "Add" and connect to your golf cart.

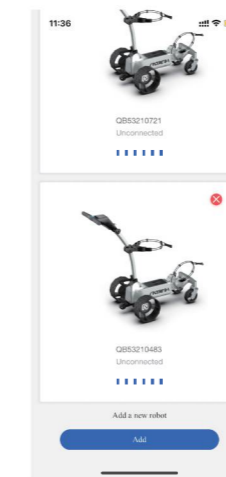

Step 5: Once connected successfully, proceed with personalized settings.

All AI features are integrated under Run Settings > AI Follow.

Note: Please set the following distance and speed according to your preference.

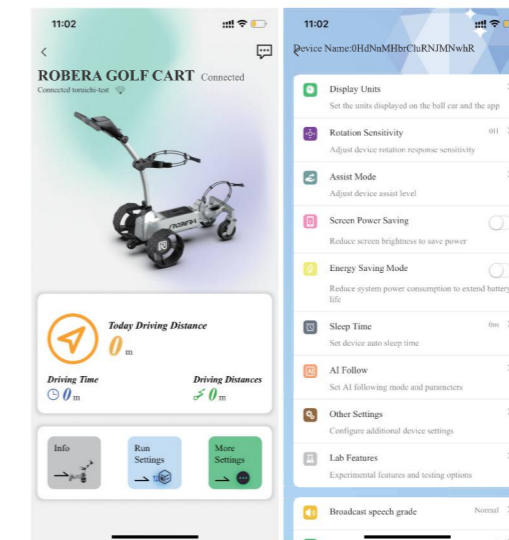

Please scan the QR code below for more details (video demonstration).

