



NAVIGATOR[™]

QUAD

User Manual
VERSION 1.2

Thank you for purchasing the Quad series motorized cart. To get the most out of your cart please follow these quick steps before use.

- Charge your battery (section 4.0)
- Assemble your cart (section 3.0)

For Customer Support, please contact Bag Boy directly for immediate and professional advice.

Email: bagboyys@bagboy.com

Toll Free: 1.800.955.2269

NOTE: *This user manual was correct at time of printing. The online version is the most up-to-date and must be referred to as the correct version. To download the most current user manual please visit www.bagboy.com*

NAVIGATOR™

QUAD

Contents

1.0	Registration	04
2.0	What's Included	04
3.0	Assembling Your Cart	05
3.1	Attaching the Front Wheels	05
3.2	Attaching the Rear Wheels	05
3.3	Rear Wheel Positions	06
3.4	Unfolding	07
3.5	Folding	08
3.6	Positioning the Seat	08
3.7	Attaching the Beverage Holder	09
3.8	Attaching the Umbrella Holder	10
4.0	Battery Care	10
4.1	Charging Your Battery	10
4.2	Tips and Looking After Your Battery	11
4.3	Plugging in the Battery	12
5.0	Battery Fuse	12
6.0	Front Wheels	13
6.1	Removing the Front Wheels	13
6.2	Adjusting and Aligning the Front Wheels	13
6.3	Front Wheel Maintenance	14
7.0	Fifth Retractable Rear Wheel	14
8.0	Fitting Your Golf Bag	15
9.0	Operating the Top Box	15
9.1	On/Off Speed Control Button	15
9.2	Battery Level Indicator	16
9.3	Remote Battery Level Indicator	16
9.4	Units Measurements	16
9.5	Distance Modes	16
9.6	Competition Mode	17
10.0	Remote Control Features	17
10.1	Charging Your Remote Control	17
10.2	Forward Arrow	18
10.3	Down Arrow	18
10.4	Left and Right Arrow	18
10.5	Speed Control - Manually and Remotely	18
10.6	Keypad Unlock and Lock	18
10.7	Remote Range and Safety Stop	18
11.0	Gyroscope Anti Deviation Navigation System	19
12.0	Integrated GPS Holder and Compartment	19
13.0	Warranty	20
14.0	Preventative Maintenance Program	22
14.1	Cleaning Your Quad Cart	22
14.2	Rear Wheel Axles Maintenance	22
14.3	Upper and Lower Bag Strap Maintenance	23
14.4	Correcting the Alignment	23
14.5	Service Schedule	23
14.6	Service Record	25
15.0	Service and Repair Centers	26
16.0	Purchasing Parts and Accessories	26
17.0	Contact Bag Boy	26
18.0	Frequently Asked Questions	26

I.O Registration

This cart should be registered prior to shipment. If you did not supply Bag Boy or the retailer with your information, please contact Bag Boy Customer Service at **1-800-955-2269** so the user information can be updated. The warranty will not be active until the user information has been updated.

We will need the retailer name and your cart serial number.

Please record your cart serial number in the space below for warranty purposes and for security. This is found under the battery tray.

Your information will be kept confidential and secure. We require this information for warranty activation.

My Serial Number is

(example ANQV01234567890)

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Purchased Date

		/			/				
--	--	---	--	--	---	--	--	--	--

You may be required to show proof of purchase, so we recommend you keep your receipt with this manual.

2.0 What's Included

- Quad Cart
- Remote Control
- 12v Lithium Ion Battery
- Battery Charger
- Padded Seat
- Umbrella Holder
- Beverage Holder
- Lower Bag Strap
- 5th Retractable Wheel
- USB Cord (for remote control charging using PC or adaptor (not provided))
- **Spare Parts**
 - Speed Button x 1
 - 40A Fuse Connector x 1 (see battery care section)
 - 4mm Allen Key (for aligning front wheel as required)
 - 4 x Rubber Gaskets for the rotating front wheel housing (see front wheel maintenance section)

3.0 Assembling Your Cart

3.1 Attaching the Front Wheels

The two front wheels need to be attached to your Quad cart. There is no difference between each front wheel so either can be placed on the left or right side. Simply line up the silver pin on the front wheel with the cart and push into the frame until you hear a positive click. You can test the wheel is in position by pulling firmly on the wheel. It should not move out of position.



3.2 Attaching the Rear Wheels

Step 1. On the wheel, slide the release button across.




Step 2. You will notice you need to match up the wheel with the axle. When placed in position, simply release the button. You will hear a "click" when the wheel is properly secured. To check that the wheel is properly in position, pull on the wheel. If it is properly in position it will not slide off. Repeat for the right wheel.



3.3 Rear Wheels Positions


The Quad cart is designed to allow the rear wheels to be in two positions. The position is determined by where the wheel is locked on the axle in either of the two grooves (see picture). The drive position is used during the normal operation of the cart. The free wheel position is used to freely push the cart should you experience battery or service issues on the course.

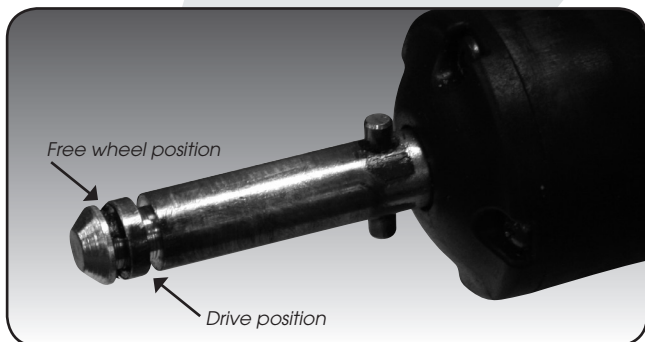

i. Drive position – Lock the wheel onto the groove closest to the battery tray. To do this, while sliding the release button on the wheel across, push the wheel on to the axle as far as possible. To test for drive position, try rolling the wheel forward. If you feel resistance, then the wheel is now in drive position and ready to use. Repeat for both wheels.

ii. Free wheel – Lock the wheel into the groove furthest from the battery tray. To do this, while sliding the release button across on the wheel, push the wheel onto the axle and release the release button onto the groove. To test for free wheel position, try rolling the wheel forward. The wheel should spin freely with no resistance. Repeat for both wheels.

3.4 Unfolding

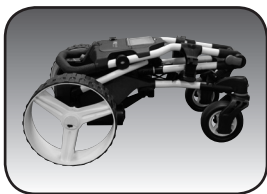

Step 1: Ensure both rear wheels are attached.



Step 2: Release the blue fold lever to unlock the handle.





Step 3: Slide the blue fold lever upwards to unlock the frame.


Step 4: The handle is now free to pull upwards. The cart will naturally unfold as you continue to pull upwards until the cart is completely open.




Step 5: Close the blue fold lever to lock the handle into place.

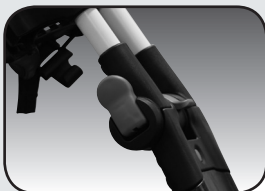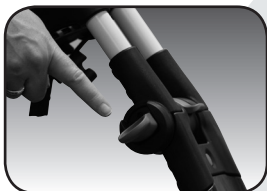

Step 6: Bring the top bag support brackets together, then lock together using the button.

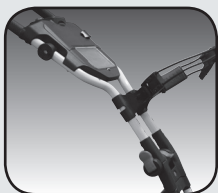

3.5 Folding

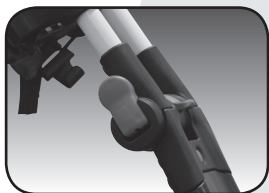


Step 1: Open the blue fold lever to release the handle.





Step 2: Press the button shown while applying pressure down to close.

Step 3: Lower cart down flat and close fold lever 1 to lock handle.

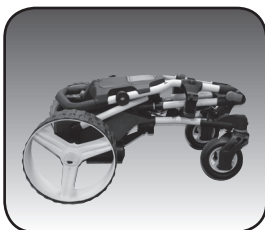


3.6 Positioning the Seat

Step 1: Using the bracket provided, feed it through as shown in the picture.

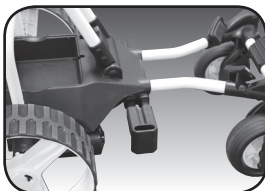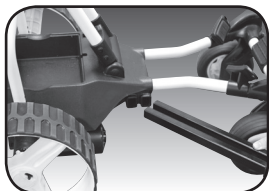


Step 2: Secure the bracket by adding the screw in the position shown.

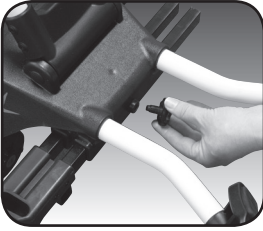

Step 3: You can now insert the seat into the bracket.

Your cart will look like the below photo once the seat is installed. For personal preference, the seat can be attached on either side of the cart by inserting the seat bracket from the opposite direction.

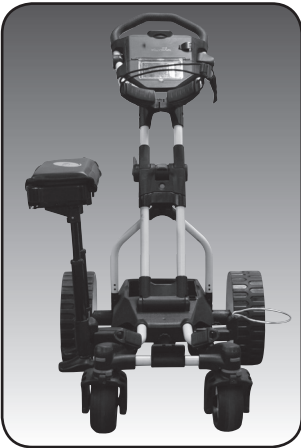

IMPORTANT: Press the seat with your hand before sitting. Do not use the seat on uneven surfaces. Bag Boy does not warranty any seat support brackets that are damaged or bent.

3.7 Attaching the Beverage Holder

The beverage holder can be installed in the upper or lower bracket on the right side of the cart. Insert the pin of the beverage holder and twist until it locks into place.



3.8 Attaching the Umbrella Holder

The umbrella holder is attached to the frame using the largest bolt. Screw this into the frame as shown in the picture.



Your umbrella holder can be adjusted backwards, forwards, and to the side. The umbrella is secured inside the umbrella holder by tightening the plastic bolt located near the top of the holder.

IMPORTANT: Do not leave your umbrella up in the holder in windy conditions. If the wind catches the umbrella, it could cause your cart to tip over and cause damage which will not be covered by warranty.

4.0 Battery Care

4.1 Before using your Quad cart for the first time, you must fully charge your battery overnight.

The Navigator Quad can only be used with a:

- 12v 24amp Lithium battery

To charge your battery:

- Unplug the battery from your cart (after play).
- Plug the charger into a power point.
- Plug the charger into the battery.

INDICATOR

- POWER ON / CHARGED
- CHARGING
- AUTO POWER OFF (GREEN LED FLASHING)
- FAULT (RED LED FLASHING)

There are lights on the charger to help you understand the charging process.

- The Green LED illuminates to indicate the charger is powered on.
- The Red LED indicates the battery is charging.
- The LED will turn Green when the battery is fully charged.
- The LED will flash Green when the battery is on float charge.
- The Red LED will flash if there is a fault with the charger.

4.2 Tips and Important Information About Charging Your Battery

- Always recharge the battery as soon as possible after use no matter how short the period of use. Leaving your battery uncharged will only reduce the life of the battery.
- Your battery will charge best lying flat, in a warm and open location.
- Never charge your battery on a concrete floor. It is best to charge the battery in a warm location within the house.
- The charger is a smart digital charger and will not overcharge your battery.
- Lithium ion – If the cart will not be used for longer periods of time (3 months or longer), it is best to fully charge the lithium ion battery and then store in a warm, ventilated room. After 3 months the battery will need to be “topped off” with a supplemental charge to keep the battery performing at its best.

Looking after your battery during play and travel

- During play, minimize the drain on the battery by avoiding taking your cart into the rough whenever possible.
- Avoid using the cart to pull you up hills.
- If you are intending to take your cart and battery on a flight, we advise that you contact your airline prior to travel.
- Be very careful not to drop your battery. The battery casing is easily cracked and the battery’s subsequent life will be severely compromised.
- Do not carry the battery by the leads. Use the carry bag strap or built-in strap.
- Do not submerge the battery in water.

Please refer to the Battery Charger User Manual for a complete list of important information.

4.3 Plugging Your Battery into the Cart



Step 1: Place the battery into the battery tray.



Step 2: Plug the battery into the cart as shown.

Your cart has been equipped with a fail-safe battery connection, so the cart will not move when you plug the battery in. Your cart will only start once the speed control is switched on.

5.0 Battery Lead Fuse

Your battery has a 40amp fuse connected to the battery lead. The 40 amp fuse helps protect the cart's control board against a power surge. An extra fuse is supplied with your cart. In the unlikelyhood of your cart stopping, the reason could be that the fuse has blown. Replacing the fuse is simple.

The fuse is located on the positive lead close to the battery terminal.

To replace the fuse, simply open the case and remove the existing fuse with a pair of pliers. Insert a new fuse ensuring the two feet are guided into their sleeves. Refit the fuse cap.

6.0 Front Wheels

6.1 Removing the Front Wheels

The front wheels can be removed by pressing the blue button shown in the picture and pulling the wheel down until it is completely removed from the cart.




6.2 Adjusting and Aligning the Front Wheels

Each cart is checked for straight tracking prior to leaving the factory. In the unlikely event the Quad cart is not tracking straight, the front wheels can be adjusted to regain straight tracking as follows:

1. Start the cart using the manual controls on a straight, flat path. Do not start using the remote, otherwise the Navigation system will start. Watch the cart to see if it veers left or right.
2. Now turn the wheel you want to adjust until you see the two adjusting bolts in the front wheel (see photo on next page).
3. If the cart veers left, use the 4mm Allen Key provided in the Quad free spare parts to screw the right bolts (in both front wheels) clockwise and/or the left bolts counterclockwise (as shown on the next page).
4. If the cart veers right, use the 4mm Allen Key provided in the Quad free spare parts to screw the right bolts (in both front wheels) counterclockwise and/or the left bolts clockwise (as shown on the next page).

Please note that there is a process in adjusting the track as explained in points 3 and 4 above. It is suggested that the user should make a small adjustment, test the tracking and then adjust again until the cart goes straight. After the cart tracks straight, do not swap the left and right front wheels.

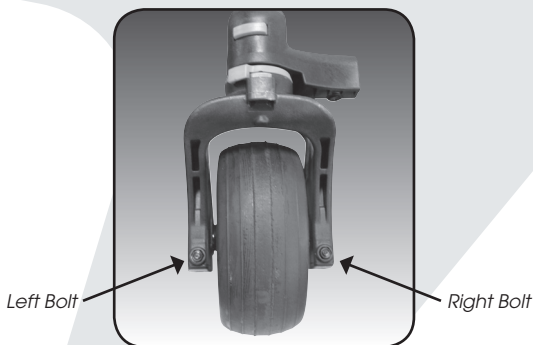

6.3 Front Wheel Maintenance

During the life of the Quad cart, you may experience wearing of the front wheel gasket. This may result in a noise coming from the front wheel during use. You can replace this gasket at home using 1 of the 4 gaskets included in the spare parts included with your cart. Follow these easy steps:

Step 1: Remove the front wheel following the steps in section 6.1.

Step 2: Place the rubber gasket over the wheel pin.



7.0 Fifth Retractable Rear Wheel


The Navigator Quad comes standard with a fifth retractable rear wheel. This wheel **MUST** be retracted into position at all times when in use. This will reduce damaging the cart, and provide the ultimate in stability across all terrains. This fifth wheel should be cleaned regularly with a cloth to ensure it can retract as required for storage.



8.0 Fitting Your Golf Bag

Securing the top bag strap

- Provide a good location for the positioning of both ends of the bungee straps.
- Stretch the longer end of the strap and secure to the extended shorter end.
- The attached strap should now be connected.

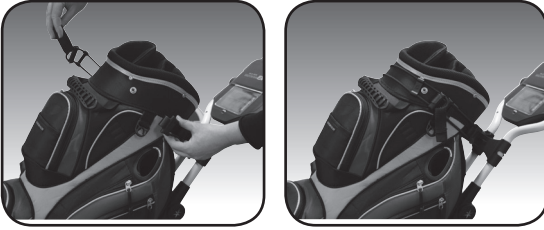

Adjusting the length of the top strap

- The plastic bar on the longer length can be adjusted to ensure the bag is secured properly in place.

Securing the lower bag strap

- The Quad cart is designed so the lower bag strap is no longer required. However the lower strap has been included for your own preference. It is easily attached by clipping each end of the strap into the eyelets on the lower bag support.

9.0 Operating the Digital Top Box



1. Control button 1
2. Control button 2
3. Speed Control ON / OFF button
4. Speed indicator
5. Battery level indicator
6. S-SLA battery type / L-Lithium
7. Remote Control battery level indicator

9.1 On/Off Speed Control Button

To start your cart:

1. Preset your desired speed by rotating the speed control button clockwise to increase speed, or counterclockwise to decrease the speed. The speed setting chosen is displayed on the color screen on the left side. Then tap the speed control button to start and stop the cart, or
2. Simply tap the speed control button to start the cart, then adjust the speed settings to your desired speed.

9.2 Main Battery Level Indicator

Battery indication is located on the right side of the top screen. Two colored bars (the top bar and bottom bar) are highlighted showing a full charge. When only the bottom is highlighted, there is less than 25% battery life remaining. You should always check the battery status before you play golf to ensure the top and bottom bars are highlighted.



The battery indicator is set to L for Lithium as the Navigator Quad is only compatible with the 12v 24amp Lithium battery.

9.3 Remote Battery Level Indicator

The Navigator Quad remote is powered by a rechargeable lithium battery. See section 10.1 for tips on recharging. The Digital top box displays the remote control battery level on screen so you can track the power level.

9.4 Unit Measurements

You can change from kilometers to miles simply by pressing the Control button 2 (on the right).

9.5 Distance Modes

There are three distance measurements. To move between modes, press Control button 1 (on the left).

1. Distance A and B: resettable distance measurements can be used to measure how far you hit your shot and how far you have walked for the day. To reset, simply press Control button 1 (left side) for 3 seconds until the reading displays "0".
2. Distance Total: cannot be reset as it is the Odometer for the life of the cart. This feature will assist with service reminders which are recommended at each 310 miles or 6 months periods.



9.6 Competition Mode

In the unlikely event the club you are playing at does not allow the use of distance devices, you will need to disable the distances feature on the Quad cart.




To disable the distance recording feature, simply hold down the two control buttons at the same time for 3 seconds. By doing this, the distance recording will be removed from the screen and replaced with the words "Comp Mode."

10.0 Remote Control Features

10.1 Charging Your Remote Control

Before you start using your Navigator Quad you must fully charge the remote control internal lithium ion battery for approximately 6 hours or longer using the USB cord provided. The UNLOCK button will flash while charging. When a full charge is complete, the green light will stay on and stop flashing.

To charge the remote, plug the USB cord into the USB plug at the base of the remote as pictured in the diagram. The cable then needs to be plugged into your PC or Laptop for charging. Alternatively you can plug the cable into an AC adaptor (not

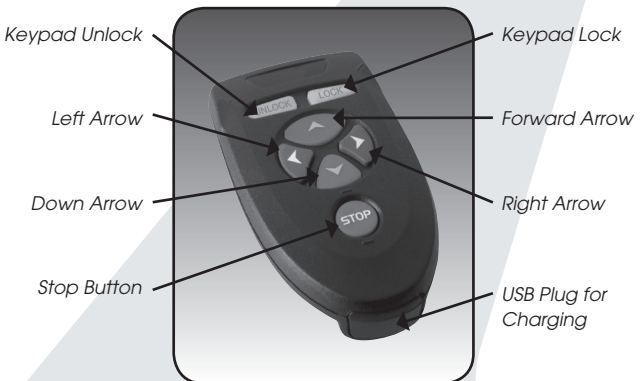

provided).

To check the level of power in the remote, use the remote control to direct the cart, or at least press a button to talk to the Digital top box and the remote control battery level will show on the screen on the cart. See section 9.3 for more information.

10.2 Forward Arrow

Press the forward button to start cart and accelerate the cart. The longer you hold the button, the faster the cart travels.

10.3 Down Arrow

The down arrow decreases the speed and provides for reverse. If you are moving forward, the down arrow can be used to decrease speed – the longer the pressure, the slower the speed. To operate the Reverse mode you must stop the cart first. Press the down arrow and the cart will reverse. The cart will move in the backward direction only while you keep the arrow depressed. If you remove your finger from the down arrow, the cart will stop (safety feature).

10.4 Left and Right Arrow

Press the appropriate turn command, left or right buttons, and keep pressed until the degree of turn is achieved. Momentary pressure will make a small adjustment to the direction. Holding pressure will increase the amount of turn and speed of the turn.

10.5 Speed Control – Manually and Remotely

Under manual control, you can adjust the speed by turning the speed control button to the left or right. When changing to the remote control, irrespective of the speed level indicated on the display, the cart will always start at speed 1.

10.6 Keypad Unlock and Lock

The remote control has two buttons at the top which allow you to LOCK and UNLOCK the keypad. This will help eliminate accidental control when, for example, the remote is in your pocket. The STOP button will continue to work when the LOCK feature is activated.

10.7 Remote Range and Safety Stop

The Navigator Quad can be remotely controlled up to 54 yards. This is for the protection of your cart, yourself and others. To avoid your cart losing signal to your remote, keep the cart within 54 yards during play.

II.0 Gyroscope Anti Deviation Navigation System

The Navigator Quad is built with a patented Gyroscope “anti deviation” navigation system. This automatic feature ensures the cart maintains its direction regardless of the terrain. The cart will automatically brake or accelerate either wheel to maintain its direction.

When the cart is controlled by the remote, the Navigation system is always ON.

When the cart is controlled manually, the Navigation system is always OFF.

Tip: On a steep incline, the gradient may force the cart off line. You do not need to adjust the cart. The cart will work its way back on course. In addition, if the cart hits a tuft of grass or other object, the cart will momentarily be forced off course. Do not be concerned. The cart knows where to go and will get back on track quickly.

II.0 Integrated GPS Holder and Compartment

In the top handle compartment is an integrated GPS/mobile device holder. To open the holder always press the colored button at the top of the holder. Place the GPS or mobile device into the cradle, then close the holder by squeezing the two sides together.



13.0 Warranty

Duration of this warranty is:

- 1 year on parts
- 1 year on lithium batteries and chargers

This cart was preregistered before shipping. Please contact Bag Boy Customer Service at **bagboyics@bagboy.com** or **1.800.955.2269** to update the registry information for your cart. The limited warranty will not be active until the product has been registered.

The Navigator Quad warrants to the original purchaser that this product should be free from manufacturing defects of any materiality that affect product performance and customer satisfaction when subject to normal and proper use for a period of 1 year after the date of purchase .

Bag Boy's obligation under this warranty is expressly limited to supplying replacement parts and labor for, or replacing, at its option, any product that is, in the sole discretion of Bag Boy, found to be defective.

This warranty is not transferable and applies only to products purchased in the United States from an authorized Bag Boy dealer.

Proof of purchase is required in the form of a bill of sale or receipted invoice.

This warranty covers only defects in materials and workmanship. Any improper use or alteration or repair by an unauthorized service provider shall void this warranty.

WATER: The product is designed to be weather resistant. Seals and proper precautions have been installed to prevent moisture and water penetration into vital electronic components. If water or evidence of water is found inside the motor housing or top box, this is considered neglect and/or abuse and voids the warranty.

If a battery is claimed as a warranty, a picture of the 2 serial numbers (engraved number and sticker) on the battery and the charger must be emailed to Bag Boy **bagboyics@bagboy.com** for warranty confirmation and processing.

Please keep the carton and all packing material in good condition in case of a warranty claim. You may call Customer Service to order a replacement box and insert in case of a warranty claim. Defective products must be sent to the Bag Boy authorized service center to obtain warranty service. Please ship a warranty claim prepaid to the Bag Boy service center. Bag Boy is not responsible for transportation costs to the service center. If it is determined to be under warranty, Bag Boy will cover return shipping to the customer.

Pre-authorization is required before sending any unit in for warranty service.

Product returned to the Bag Boy service center must utilize either the original carton box and shipping material, packaging that affords an equal degree of protection or purchase of a qualified Bag Boy shipping carton. Failure to follow packing instructions may result in shipping damage.

The warranty is subject to the following exclusions and conditions:

- Accidental damage, customer misuse or neglect
- Power surge
- Improper charger used
- Improper battery used
- Wear and tear
- Rental or other commercial use
- Shipping damage
- Unauthorized modification to the product
- Faulty repairs by consumer or unauthorized agent
- BAG BOY does not warrant any seat support brackets that are damaged or bent.
- Failure to follow battery charging instructions including discharging a battery to lower than 8 volts.

Bag Boy reserves the right to inspect or test product claimed to be defective, *at the owner's expense*.

Any parts repaired or replaced under this warranty are guaranteed to the end of the original period.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, this warranty gives you specific legal rights, and you may have other rights which vary from state to state.

LIMITATIONS & LIABILITY: BAG BOY LIABILITY SHALL BE LIMITED SOLELY TO ITS RESPONSIBILITIES UNDER THIS WARRANTY. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OF ANY KIND AND THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE PRODUCT AND NO WARRANTY SHALL BE IMPLIED BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL BAG BOY BE LIABLE FOR INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGE FOR PERSONAL INJURY, PROPERTY DAMAGE OR ECONOMIC LOSSES. BAG BOY SHALL HAVE NO LIABILITY FOR ANY CLAIM BY ANY THIRD PARTY EXCEPT AS EXPRESSLY PROVIDED HEREIN.

What you should do – in case of warranty:

The original owner should call Bag Boy Customer Service (1.800.955.2269). A copy of the purchase receipt or bill of sale will be necessary to begin any claim process. Those parts and/or products which are determined by Bag Boy in its sole discretion to be defective will be provided only after a valid warranty claim is processed by Bag Boy Customer Service. Warranty claims must be made within the warranty period stated above.

Specially designed shipping cartons are available for purchase. Please call Bag Boy Customer Service for pricing and availability. It is highly recommended that this carton be used for shipping. If the original packaging has been discarded, Bag Boy is not responsible for any shipping damage that may occur in transit. Any damage incurred must be filed directly with the shipping company.

Battery Note:

The Navigator Quad includes a Lithium Ion battery. You can also find this standard battery technology in many other devices. This particular battery is not allowed on commercial passenger flights. Like other rechargeable batteries, these batteries may eventually require replacement. The battery must be stored in a warm environment and kept off of cement floors.

14.0 Preventative Maintenance Program

14.1 Cleaning Your Quad Cart (See Maintenance Schedule)

For years of good operation, your cart requires care and attention.

- Keep your cart clean by using a cloth with warm water and a mild detergent.
- Do not hose down your cart under any circumstance, as your cart has electronic components.
- Ensure that the seat stem bracket is free from sand.
- Do not submerge your cart in water, as it will cause irreparable damage.

14.2 Rear Wheel Axles Maintenance (See Maintenance Schedule)

The rear wheel stub axles need to be lubricated regularly. Remove the rear wheels by depressing the spring clip and at the same time pull off the wheel. Apply Petroleum Jelly or light grease to the stub axles. Use a very small amount as the grease can attract sand. If you play in sandy conditions you should clean your axle and grease regularly.

14.3 Upper and Lower Bag Strap Maintenance (See Maintenance Schedule)

The bag straps should be replaced as per the Service Schedule. The upper bag strap can be replaced by:

- Removing the left and right hand straps from the upper bag support.
- Undo and remove the screws holding the strap in position on the bag support.
- Remove and replace both bag straps.
- Insert bag strap securing screws.

14.4 Correcting the Alignment

See the front wheel alignment in Section 6.2.

14.5 Service Schedule

It is the owner's responsibility to ensure that all periodic checks, necessary adjustments and services are carried out. If in doubt, please contact the Bag Boy Service Center at 1.800.955.2269. Any work performed on your cart should be recorded on your service record regardless of the work.

Navigator Quad	Monthly	6 Monthly	Every 2 yrs	Every 3 yrs
Wipe down the cart with a warm cloth after each use (do not hose)	CO			
Clean the 5th wheel	CO			
Lubricate rear wheel stub axles	CO			
Check and tighten nuts and bolts		CO/SC		
Check and tighten handle pivots		CO/SC		
Check alignment of cart – ensure that it runs straight		CO/SC		
Replace Speed Control button			CO/SC	
Replace speed controller and On/Off switch assembly			CO/SC	
Replace rear and front wheels				CO
Replace upper and lower bag straps				CO

CO = Cart owner can carry out this work

SC = Charged work to be carried by approved service center

CO/SC = The six monthly service can be completed by either an authorized service center or the owner of the cart.

14.6 Service Record for All Carts

6 month inspection	Date: Invoice #:	Serviced by: Signature:
1 year inspection	Date: Invoice #:	Serviced by: Signature:
1 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
2 year inspection	Date: Invoice #:	Serviced by: Signature:
2 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
3 year inspection	Date: Invoice #:	Serviced by: Signature:
3 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
4 year inspection	Date: Invoice #:	Serviced by: Signature:
4 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
5 year inspection	Date: Invoice #:	Serviced by: Signature:
5 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
6 year inspection	Date: Invoice #:	Serviced by: Signature:

15.0 Service and Repair Centers

For all servicing, please do not go back to your place of purchase. Call **1.800.955.2269**.

For warranty repairs to be authorized, you **MUST** provide proof of purchase. Please keep this with you, as well as your serial number, which you should record in this manual.

16.0 Purchasing Parts and Accessories

You are welcome to service your cart out of warranty by purchasing parts directly from Bag Boy. Please call or email to discuss the correct parts and instructions.

17.0 Contacting Bag Boy

Bag Boy

Address:

2701 Emerywood Parkway, Suite 101
Richmond, Virginia 23294

Email: bagboyocs@bagboy.com

Web: www.bagboy.com

18.0 FAQ

Q: The front wheel is noisy in operation.

A: You may need to change the front wheel gasket caused from wear and tear. See section 6.3 Front wheel maintenance.

Q: My cart is not tracking straight.

A: You can do a simple realignment on the two front wheels. See section 6.2 Adjusting and aligning the front wheels.

Q: Why does my Quad cart no longer have a lower bag strap?

A: The Quad cart has been designed so the lower bag strap is no longer required. If you would prefer one for personal reasons, the lower bag strap is included with the spare parts when the cart was purchased.

Q: I would like to have my Quad cart serviced.

Who do I call?

A: Contact bagboyocs@bagboy.com or call 1.800.955.2269.

www.bagboy.com

1.800.955.2269

Follow us on

